

INSTRUCTIONS FOR MODELS

CPT-3001 CPT-3401

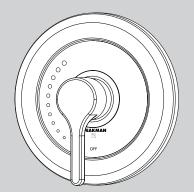

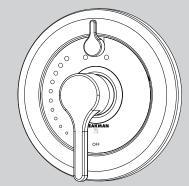

NEED HELP?

For additional assistance or service please contact:


SPEAKMAN®

على 800-537-2107 المحل customerservice@speakman.com

www.speakman.com

92-CPT-3001-02

TOOLS AND SUPPLIES

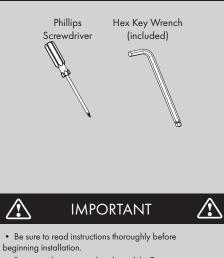

• Be sure to have properly adjusted the Temperature Limiting Stop (TLS) as outlined in the Valve Installation Manual.


• Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

MAINTENANCE

Your new Valve Trim is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.

WARRANTY Warranty information can be found at: www.speakman.com

OPTIONAL: If a firm fit is required, insert the O-Ring 1 onto the Bonnet 2 of the Shower Valve.

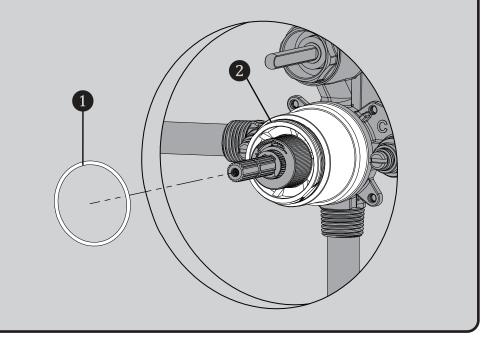



2

Ø


•

Verify that the Valve is in the "OFF" position. Install the Wall Plate (1) to the Valve. If installing a Diverter model of Trim, align the Diverter Handle to the 12 o'clock position and position the Diverter Drive Tube (2) over the Diverter Spindle of the Valve. Secure with the included Mounting Screws (3).

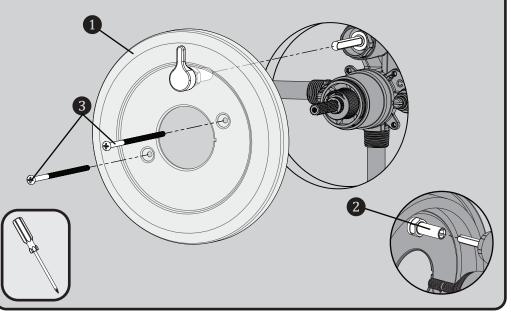

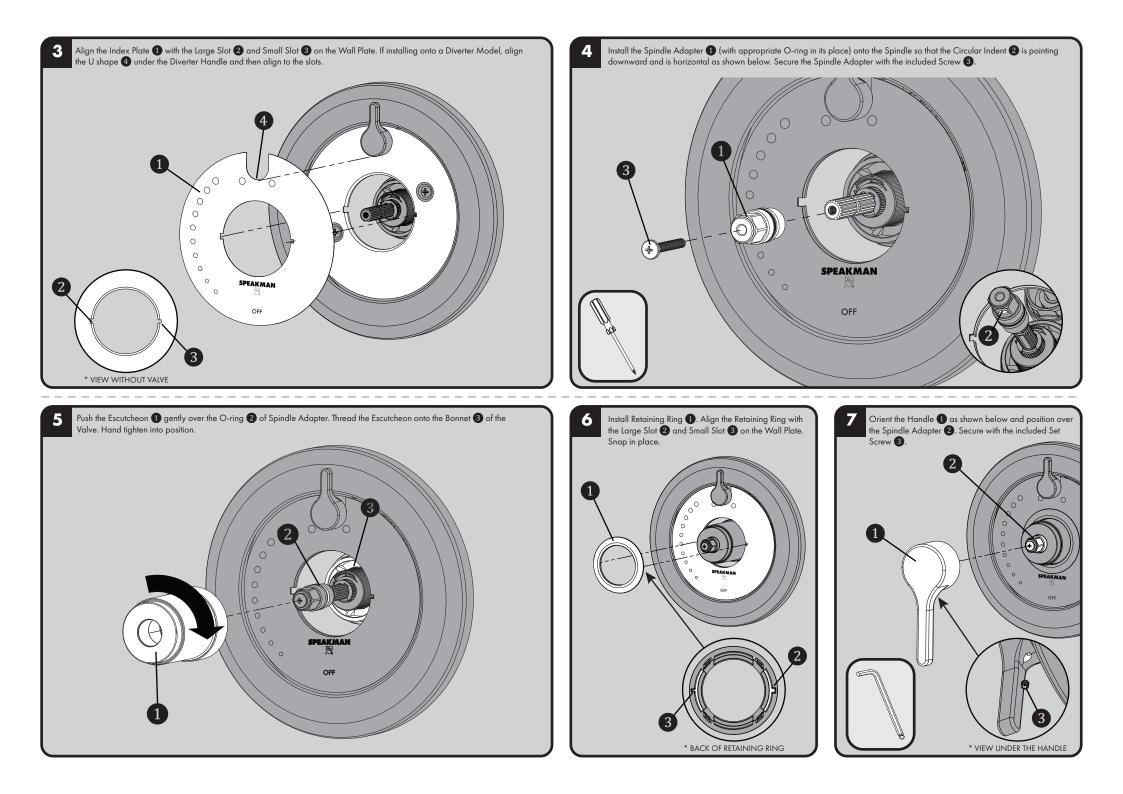


CPT-3001/3401 REPAIR PARTS

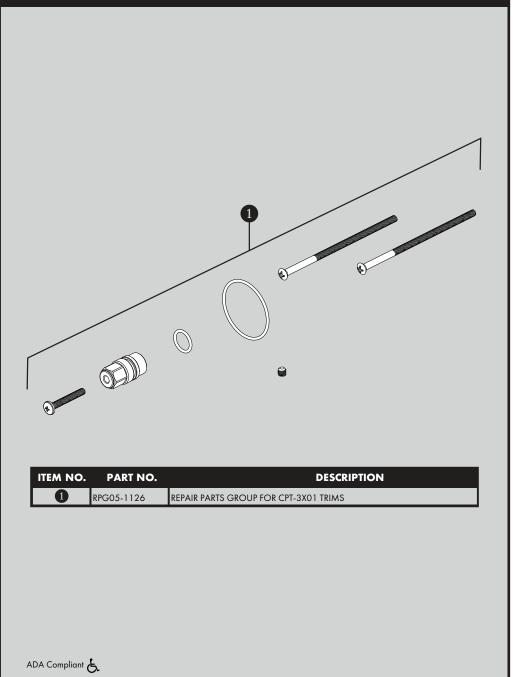

CPT-3001 ROUGH-IN DIAGRAM

SPEAKMAN®

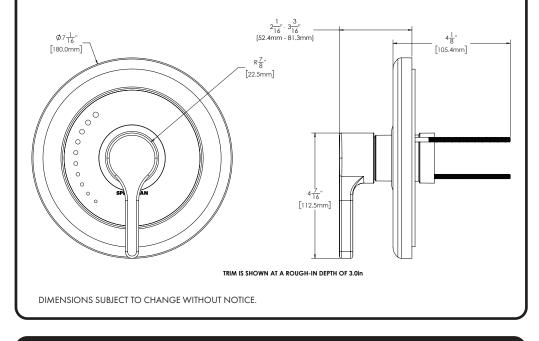

CPT-3401 ROUGH-IN DIAGRAM SPEAKMAN[®] 2<mark>1</mark>" - 3<mark>3</mark>" ______ [52.4mm - 81.3mm] 1<u>1</u>" [26.8mm] $4\frac{1}{8}$ " Ø7<u>1</u>" [180.0mm] [105.4mm] R⁷8" [22.5mm] 00 0 0 0 0 0 0 4<u>7</u>" [112.5mm] 15 TRIM IS SHOWN AT A ROUGH-IN DEPTH OF 3.0in DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.