SPEAKMAN COMPANY SE-220-SS Installation, Maintenance & Operation Instructions

LIFESAVER® EMERGENCY SHOWER

DESCRIPTION

Emergency deluge shower supplied with stay-open full flow ball valve, activated by triangular pull rod.

SPECIFICATIONS

SHOWER HEAD: 8" Dia. Stainless Steel. FLOW CONTROL: Internal 20 gpm Regulator. VALVE: 1" NPT Female Stainless Steel. Stay-Open Valve. ACTIVATOR: Stainless Steel Triangular Pull Rod. INLET: 1" NPT Female. SHIPPING WEIGHT: 7 lb. EMERGENCY SIGN: 7-7/8" x 7-7/8" Plastic Wall Sign.

OPTIONS

\diamond	AL1 (Air Horn Alarm)	\diamond	FLW (Flow Switch)	\diamond	SPV (Anti-Scald Protection Valve)
\diamond	AL2 (Electrical Alarm)	\diamond	STALL (Shower Stall)	\diamond	VPL (Vapor Proof Light)
\diamond	AL3 (Electrical Alarm)	\diamond	PC (Polished Chrome Shower Head)	\diamond	SGN5 (Shower Floor Sign)
\diamond	AL2-C1D2 (Electrical Alarm / Haz. Area)	\$	BH (Brass Shower Head)	\$	
\diamond	AL3-C1D2 (Electrical Alarm / Haz. Area)	\$	FPV (Anti-Freeze Protection Valve)	\$	

INSTALLATION

Assemble unit to a 1" supply that has an uninterrupted source of potable water. Use pipe sealant on this joint. Review drawing (as shown on other side) to assure proper installation. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury.

OPERATION

This shower is activated by pulling downward on the stainless steel pull rod. The valve will continue to discharge water until the rod is manually pushed back to the off position.

TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspectors initials should be noted.


MAINTENANCE

parts call 1-800-537-2107.

Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Reference additional technical sheets (supplied) for information on the SE-911-SS stay-open valve and the SE-880 shower head. Before any maintenance is done be sure to shut the water supply off.

WARNING: Use only genuine Speakman parts

when repairing or replacing components. To order

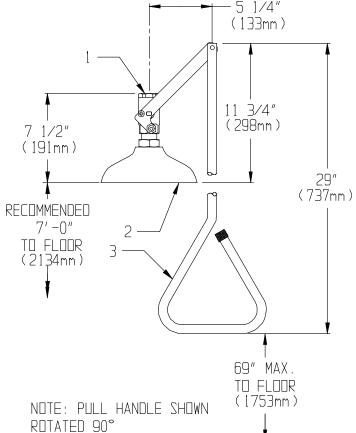

SE-220-SS REPLACEMENT/REPAIR PARTS

ITEM	PART/GROUP #	DESCRIPTION
1	SE-911-SS	1" Stay-Open Valve
2	SE-880	8" S/S Shower Head
3	G47-0044-29	Stainless Steel Pull
Rod		

FLOW DATA

SHOWER:

FLOW PRESSURE PSI (BAR)	20 (1.38)	60 (4.14)
FLOW RATE GPM (LPM)	20 (75)	25 (94)

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 20 PSI and a maximum static pressure of 125 PSI.

Note: All units meet existing ANSI Z358.1 1998 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

SPEAKMAN®

11/07 92-2169 Rev-3

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747 Visit us on the web at www.speakmancompany.com