
## Instructions for Models:

SEF-2001 SEF-2001-8 **EYESAVER®** Combination Faucet Spout

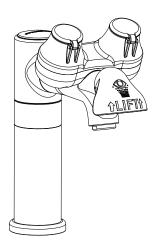


#### Need Help?

 For additional assistance or service call:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720







92-SEF-2001-R3

## What You Need To Know:

#### Tools:

#### Required:

Tube Cutter Crescent Wrench





#### Helpful:

Wrench







### Important Notes:


The supply line for this unit shall provide an uninterruptible supply of flushing fluid at a minimum of 30 psi flowing pressure. If shut off valves are installed in the supply line of the eyewash, provisions shall be made to prevent unauthorized shut off. ANSI Z358.1 requires that all emergency equipment shall be tested weekly to verify proper operation and inspected annually to assure conformance with ANSI Z358.1 requirements. Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may

#### Safety Tips:

Cover your drain to prevent loss of parts. Always wear eye protection.


#### Maintenance:

Keep the EYESAVER® faucet spout looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

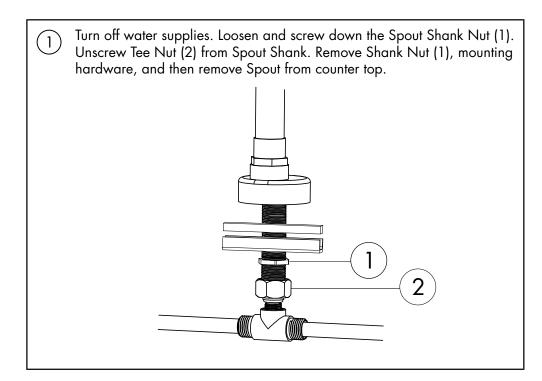


Using a Tube Cutter, cut the copper tubing between each End Body and the Tee Assembly. Remove and discard remaining copper tube and Capture Nuts from End Bodies. Remove COLD supply line from wall stop and COLD End Body.


**IMPORTANT:** 

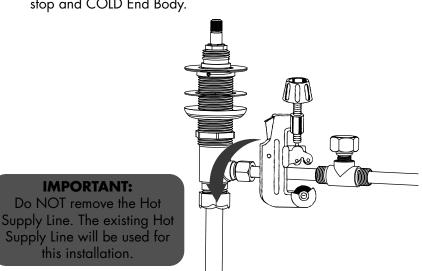

 
With Spout fully removed, verify diameter of hole in counter top is a minimum of 1-1/4". Install mounting studs into base of Spout.




 
Install Bottom Washer over hoses and slide up to meet the base of the Spout. Place hoses through hole in countertop/sink one at a time. Lower Spout Assembly through hole.





From beneath countertop, install Rubber Mounting Washer (1), Brass Mounting Washer (2) and Brass Mounting Nuts (3). Align Spout square to sink and tighten Mounting Nuts (3).

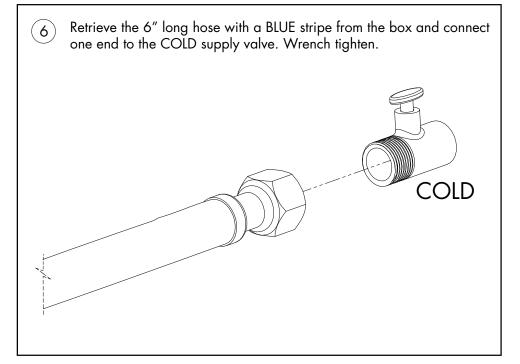


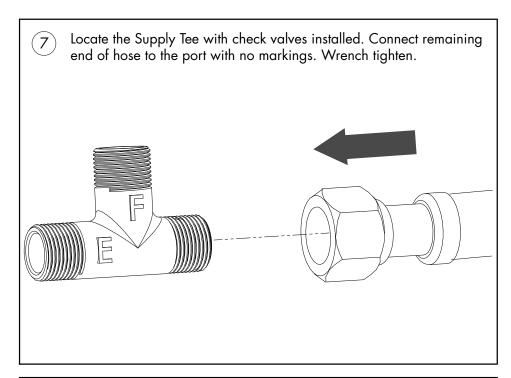

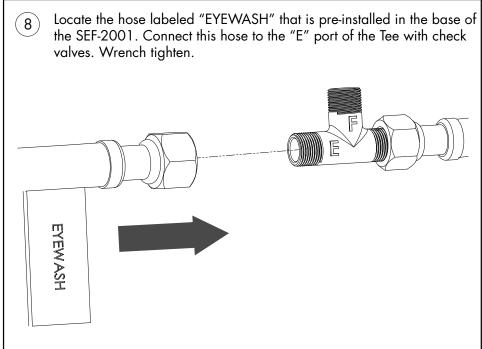


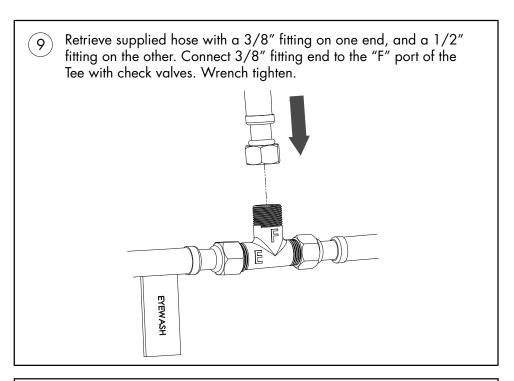


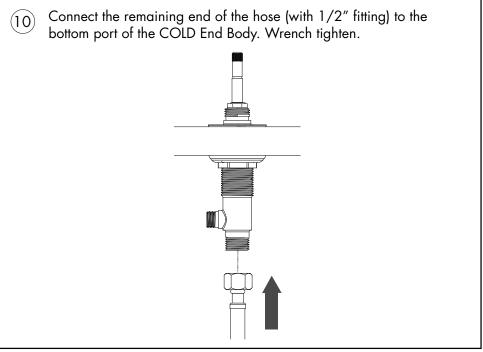

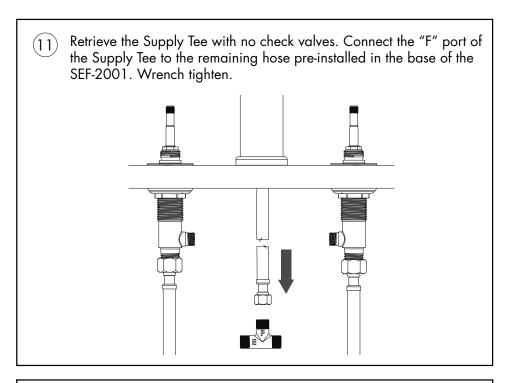


Retrieve the two (2) remaining supplied hoses. Take the first hose and connect one end to the "E" port of the Supply Tee with no check valves. Connect the remaining end to the 3/8" port of the HOT End Body. Wrench tighten.

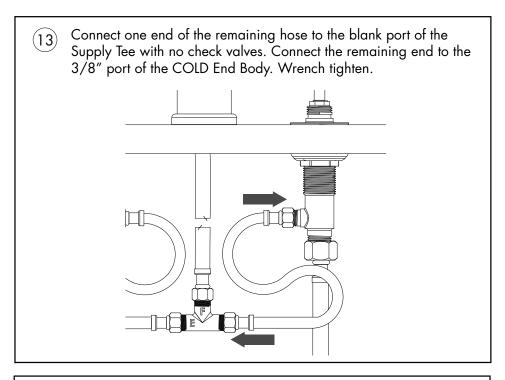


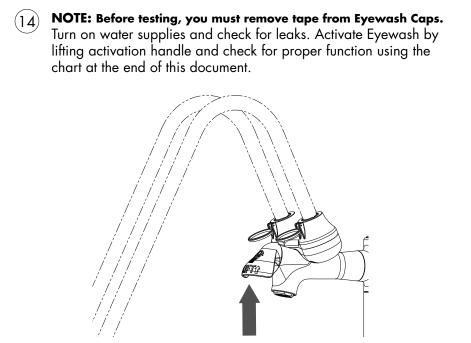


Turn on HOT and COLD handles of Faucet and allow water to run for one minute to flush any debris from Faucet. Install the Aerator with the supplied Aerator Wrench.

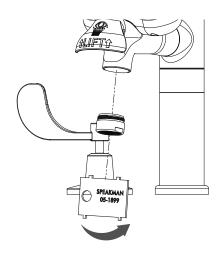

The spout was designed to swivel from left to right. If a non-swivel Spout is preferred, remove Top Cover from Body. Remove allen head Set Screw from position (1) as seen below. Center the Spout between the handles and install the previously removed Set Screw into position (2) and tighten (DO NOT OVERTIGHTEN). Replace Cap.

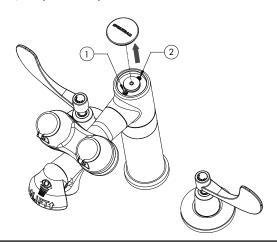

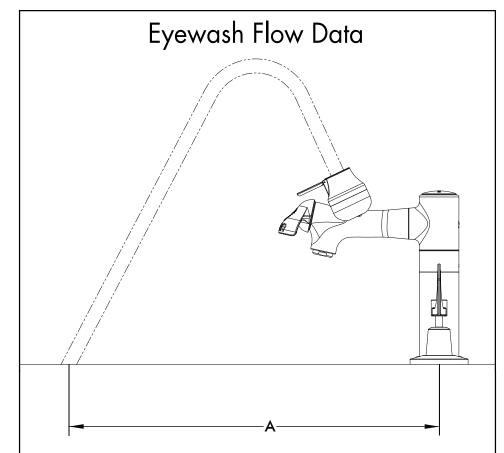

### SEF-2001

FLOWING PRESSURE		FLOW RATE		PLUME DISTANCE "A"	
psi	bar	gpm	L/min	in.	cm.
30	2.07	2.14	8.1	12	30.5
40	2.76	2.25	8.5	13	33.0
50	3.45	2.49	9.4	15	38.1
60	4.14	2.70	10.2	18	45.7
70	4.83	2.95	11.2	21	53.3
80	5.52	3.09	11.7	24	61.0


SEF-2001-8

021 2001 0								
FLOWING PRESSURE		FLOW RATE		PLUME DISTANCE "A"				
psi	bar	gpm	L/min	in.	cm.			
30	2.07	2.15	8.1	17	43.2			
40	2.76	2.24	8.5	18	45.7			
50	3.45	2.47	9.3	20	50.8			
60	4.14	2.71	10.3	23	58.4			
70	4.83	2.95	11.2	27	68.6			
80	5.52	3.13	11.8	29	73.7			

NOTE: If plume heights are low, check to ensure that your Supply Valves are fully open. If there is a noticeable height difference between the two plumes, remove the Aerators and Flow Controls and remove any debris that would inhibit the flow of water.

# ROUGH-IN MEASUREMENTS


#### **FRONT VIEW**

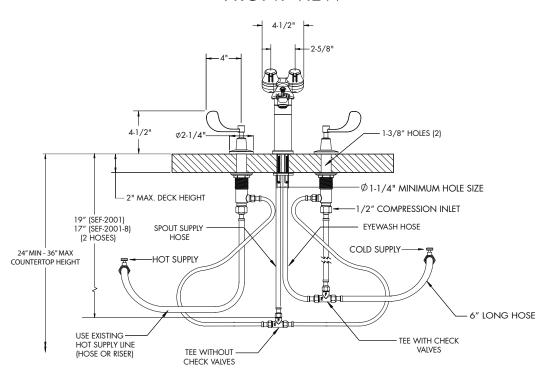


## REPAIR PARTS

G05-0872-PC	1.5 GPM FAUCET AERATOR		
RPG05-0908	EYEWASH AERATORS, FLOW CONTROL ADAPTERS, ADAPTER WASHERS, AND FLOW CONTROLS		
RPG04-0409	EYEWASH HANDLE WITH YELLOW TEXT AND SET SCREW		
RPG05-0910-PC	UPPER EYEWASH COVER WITH FLIP CAPS		
RPG05-0909	EYEWASH CARTRIDGE		
RPG49-0009	SPOUT QUAD RINGS (3) AND FRICTION WASHER (2)		
G01-0053	MOUNTING HARDWARE GROUP		
RPG41-0120	SPOUT INDEX BUTTON		
G05-0627	CHECK VALVE (FOR TEE)		

## SEF-2001 SIDE VIEW (LESS HOSES)

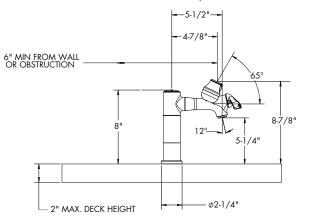

## SEF-2001-8 SIDE VIEW (LESS HOSES)

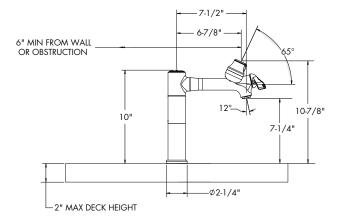

NOTE: UNLESS OTHERWISE SPECIFIED, ALL INLETS ARE 3/8" COMPRESSION WITH FEMALE THREADS. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE IN INCHES AND ARE SUBJECT TO CHANGE WITHOUT NOTICE.