

Works With: **SPEAKMAN** SC-581X / 583X / 585X Faucets Ferguson ProFlo PF1119 Fiat 830AA

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company 400 Anchor Mill Road New Castle, DE 19720



\$200-537-2107




customerservice@speakman.com



In www.speakman.com

92-SEF-9200-02

TOOLS AND SUPPLIES

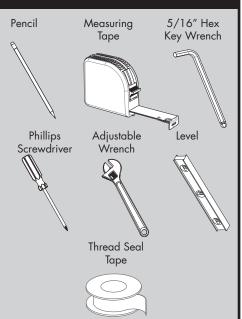



IMPORTANT



Be sure to read instructions thoroughly before beginning Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. The supply line for plumbed eyewash units shall provide an uninterruptible supply of flushing fluid at a minimum of 30 psi flowing pressure. If a shut off valve is installed in the cold supply line of the sink fitting (which supplies the eyewash) for maintenance purposes, provisions shall be made to prevent unauthorized shut off. The sink fitting does not have to be turned on for the eyewash to operate. ANSI Z358.1 requires that all emergency equipment shall be tested weekly to verify proper operation and inspected annually to assure conformance with ANSI Z358.1-2009 requirements.

SAFETY TIPS

0

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

MAINTENANCE


0

The eyewash valve has a rubber seat washer, which may require periodical maintenance. The eyewash unit can be cleaned using a mild soap and warm water solution. Rinse thoroughly and dry immediately with a soft, clean cloth for best results.


WARRANTY

0


Additional warranty information can be found at: www.speakman.com

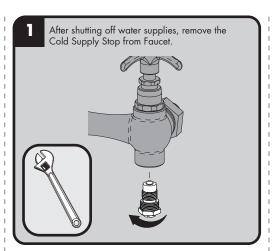


After cleaning the seat, thread the Stop Adapter into the Cold Supply Stop location of Faucet. Wrench tighten.

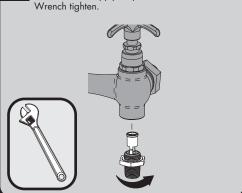


Tighten the Threaded Insert to create a seal between the Sink Fitting and the Adapter using a 5/16" Allen Wrench in the base of the

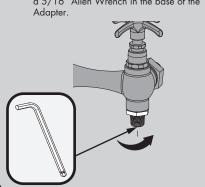



After applying Thread Sealant Tape, thread the Vacuum Breaker Assembly (1) onto the Stop Adapter. Wrench tighten.

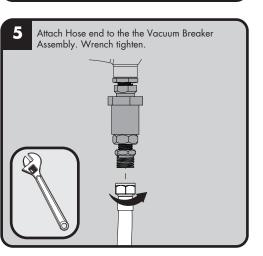


After reviewing the Roughing In Diagram, select a suitable location for installation. Using the Mounting Bracket as a template, transfer mounting locations to wall using a pencil. Be sure Bracket is level and plum.

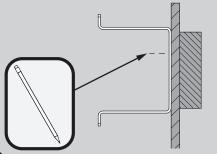

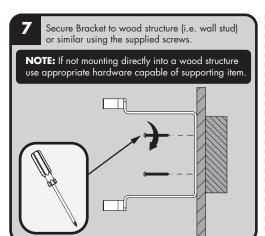


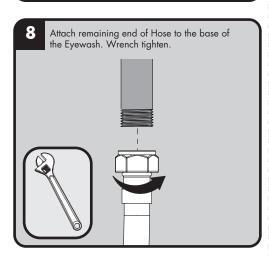

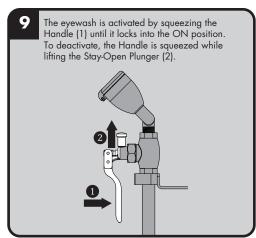

ROUGH-IN DIAGRAMS / REPAIR PARTS

SPEAKMAN®

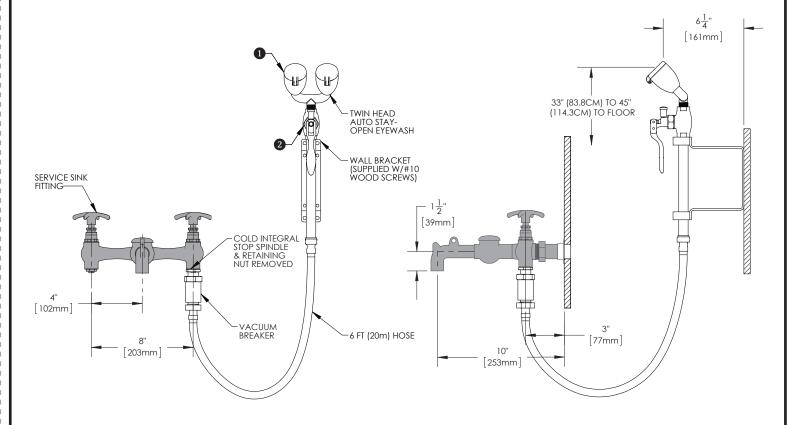

Note: Dimensions shown are for **SPEAKMAN** SC-5811 service sink. Dimensions shown for reference only.

- RPG38-0390 Yellow Spray Head Assembly
- 2 RPG45-0033 Rubber Seat Washer And Screw

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.