# **SPEAKMAN®**

# Kubos™ EasyInstall Universal Tub/Shower Combination

#### **MODELS:**

• SLV-1330-UNI: 1.75 GPM (6.6 L/min) Flow Rate Shower Head • SLV-1330-UNI-E2: 2.0 GPM (7.6 L/min) Flow Rate Shower Head

# **FEATURES:**

CPT-1300-UNI: Universal Shower Valve Trim

• S-5000-E175: Low-Flow 5 Function Shower Head 1.75 GPM (6.6 L/min) Flow Rate Shower

• S-5000-E2: Low-Flow 5 Function Fixed Shower Head

2.0 GPM (7.6 L/min) Flow Rate Shower

Head

• S-2560: Shower Arm and Flange • S-1569: Diverter Tub Spout

# **VALVE OPTIONS:**

· Retrofittable to:

- Kohler® Rite-Temp® K-304-KS valve

- Moen® PosiTemp® 62370 valve

- Delta® R10000-UNWS valve

- Symmons® 46-2-X-BODY Temptrol® valve

# STOCK FINISHES:



#### **STANDARDS:**

ADA compliant

• WaterSense: S-5000-E175 & S-5000-E2 Shower Heads

#### **WARRANTY:**

Visit www.speakman.com for full product warranty information

See Speakman.com For Warranty Information

#### Retrofits to:



MOEN® Posi-Temp® 2510 2520 2580 2590



KOHLER® Rite-Temp® K-304-CS-NA K-304-CX-NA K-304-PS-NA K-304-PX-NA K-304-US-NA K-304-UX-NA K-304-K-NA K-304-KS-NA





SYMMONS® Temptrol® 4000-BODY 4000-X-RODY 46-2-X-BODY










Information continues on next page

# Kubos™ EasyInstall Universal Tub/Shower Combination

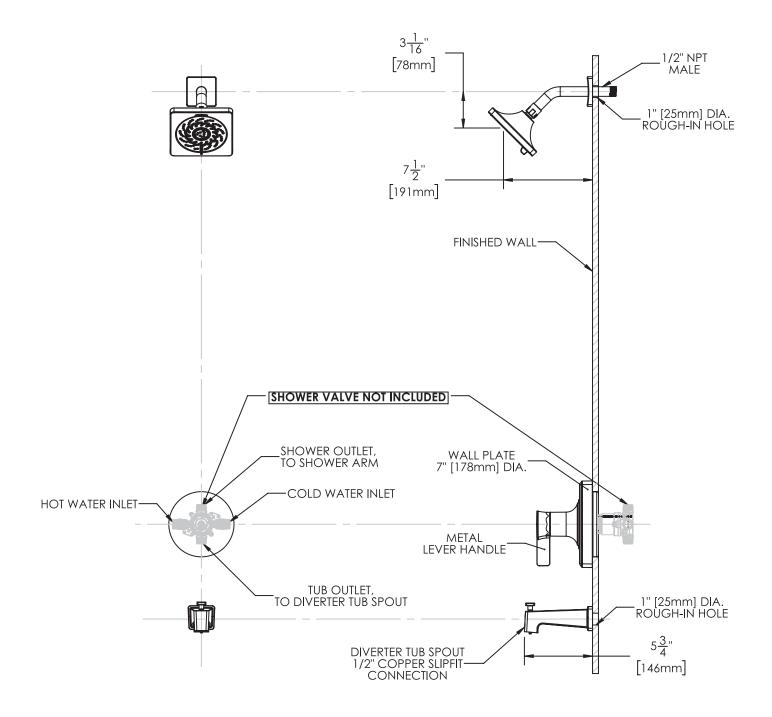


1. All dimensions are in inches (millimeters) unless otherwise specified and are subject to change without notice. 2. Unless otherwise specified all inlets and outlets are 1/2" female copper sweat and 1/2" male npt. 3. For ADA mounting locations consult ADAAG, ANSI A117.1 or state regulations.


P: 800-537-2107

F: 800-977-2747

W: WWW.SPEAKMAN.COM R: 02-APRIL 2023

# **CPT-1000-UNI** CPT-1300-UNI Delta Installation

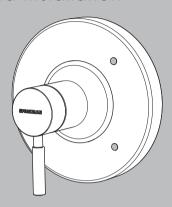

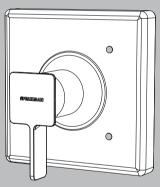

#### **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



\$2 800-537-2107



customerservice@speakman.com



www.speakman.com

92-CPT-1000-UNI-D-R2

#### **TOOLS AND SUPPLIES**

Phillips Screwdriver



#### **IMPORTANT**



- Verify that existing Valve is installed correctly per manufacturers instructions. If valve is not installed correctly, installation of the Universal Valve Trim may not be possible.
- Circular Trim Package shown for reference. While the appearance of your trim may be different, the installation steps are the same.
- This Trim Package is intended to mount only to the following Delta valves. Please verify the model of your valve prior to installation.

#### **DELTA®** MultiChoice®

R10000-UNBX

R10000-UNBXHF

R10000-UNWS

R10000-UN

R10000-UNWSHF

\*NOT FOR USE WITH DIVERTER/VOLUME CONTROL MODELS



#### **SAFETY TIPS**

Cover your drain to prevent loss of parts. Be sure to always wear proper eye protection.

#### MAINTENANCE

•

Your new Valve Trim is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

#### WARRANTY


Additional warranty information can be found at: www.speakman.com

Verify that your existing Delta Valve has the correct Cartridge installed. The Universal Valve Trim will only work with Delta's single function cartridge. If your Valve has a Dual Function Cartridge, you must replace the cartridge with a Delta 1300/1400 Series Cartridge.

DUAL FUNCTION CARTRIDGE

CANNOT BE USED WITH SPEAKMAN

UNIVERSAL VALVE TRIM

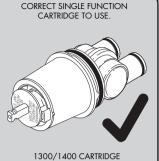


1300/1400 MULTI-CHOICE CARTRIDGE


OR
17 MULTI-CHOICE CARTRIDGE

DUAL FUNCTION THERMOSTATIC CARTRIDGE CANNOT BE USED WITH SPEAKMAN UNIVERSAL VALVE TRIM. REPLACE WITH 1300/1400 CARTRIDGE REPLACE WITH 1300/1400 CARTRIDGE OR 1300/1400 MULTICHOICE CARTRIDGE OR 1300/1400 MULTICHOICE CARTRIDGE 17T CARTRIDGE


Remove existing Delta Trim Package. Unthread and remove existing Bonnet Collar from Delta

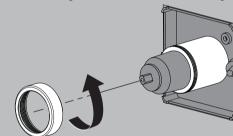



Clean front surface of wall. Ensure that the Delta Valve Stops (3) are in the open position by unthreading Valve Stop counter-clockwise. Install Valve Mounting Plate (1) to existing Delta Valve, using the 10-24 x 1-1/2" screws (2) provided. Take care to not over tighten mounting screws or damage may occur.

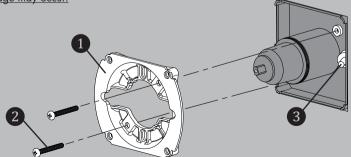



**NOTE:** Depending on the mounting depth of the Delta Valve, the Valve Mounting Plate (1) may contact either the surface of the wall, or the Plaster Guard of the Delta Valve when secured into the final position.

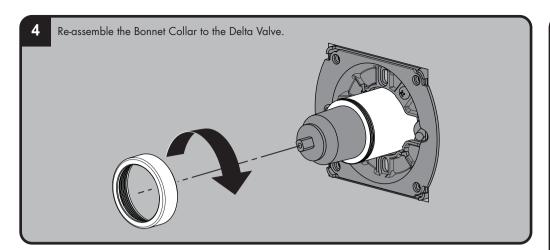


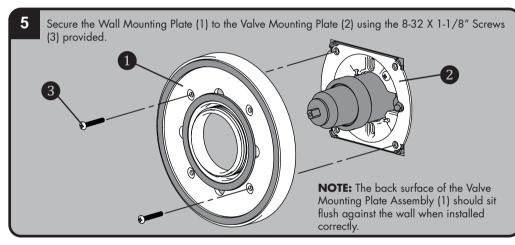


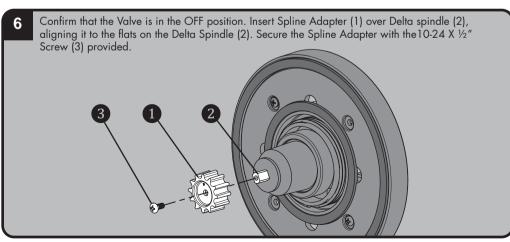


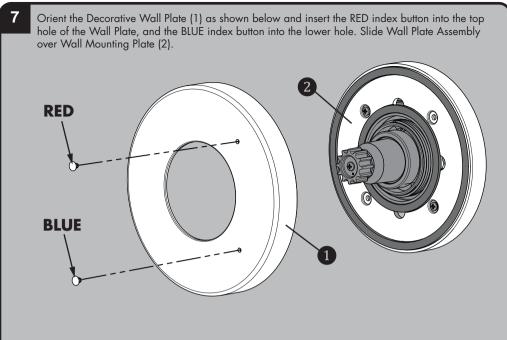

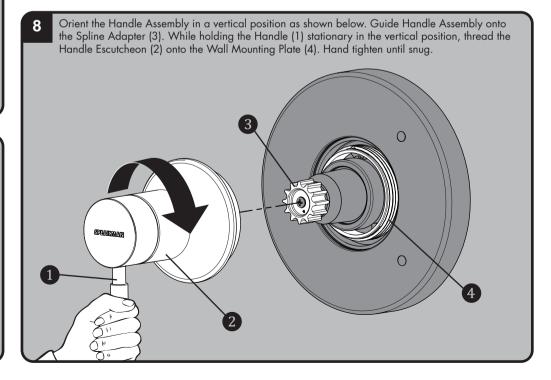


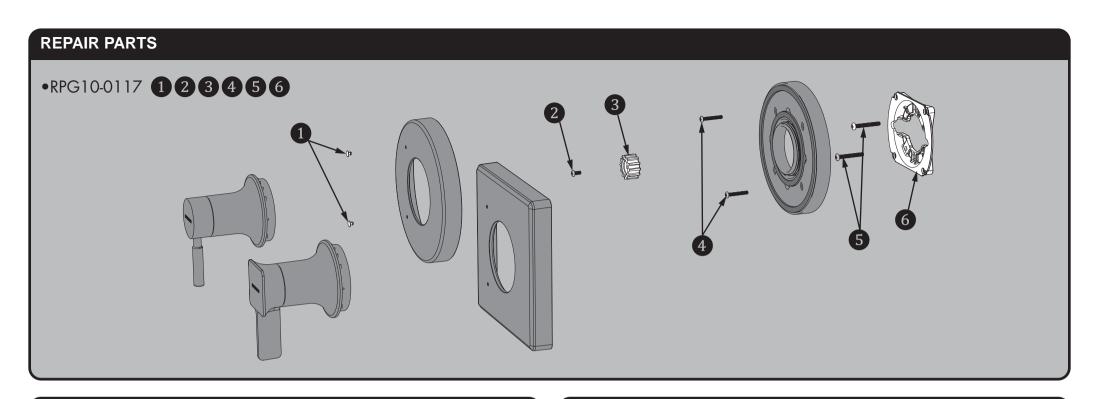


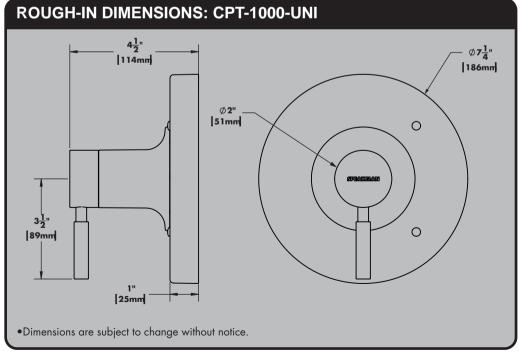

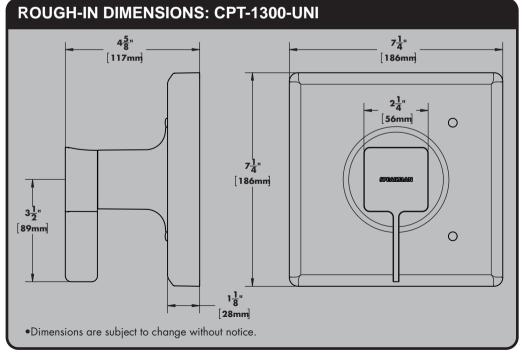

# **CPT-1000-UNI CPT-1300-UNI** Kohler Installation

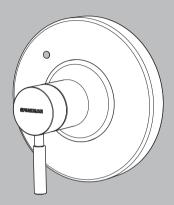

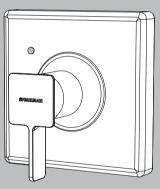

#### **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



800-537-2107 يُرْبَعُ




customerservice@speakman.com



`www.speakman.com

92-CPT-1000-UNI-K-R2

# **TOOLS AND SUPPLIES**

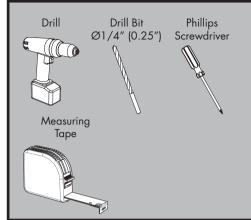



## **IMPORTANT**



- Verify that existing Valve is installed correctly per manufacturers instructions. If valve is not installed correctly, installation of the Universal Valve Trim may not be possible.
- Circular Trim Package shown for reference. While the appearance of your trim may be different, the installation steps are the same.
- This Trim Package is intended to mount only to the following Kohler valves. Please verify the model of your valve prior to installation.

K-304-CS-NA

K-304-CX-NA

K-304-PS-NA

K-304-PX-NA

K-304-US-NA

K-304-UX-NA

K-304-K-NA

K-304-KS-NA

#### **SAFETY TIPS**

0

Cover your drain to prevent loss of parts. Be sure to always wear proper eye protection.


#### MAINTENANCE


•


Your new Valve Trim is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

 
#### WARRANTY

Additional warranty information can be found at: www.speakman.com

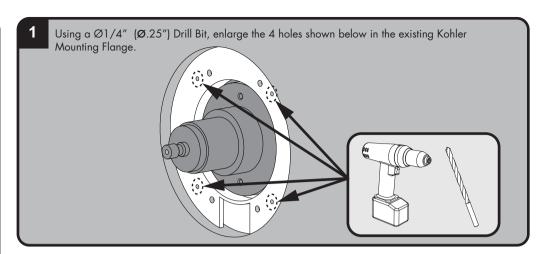

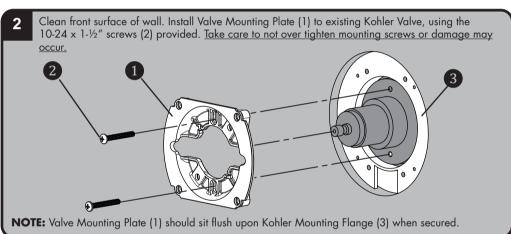


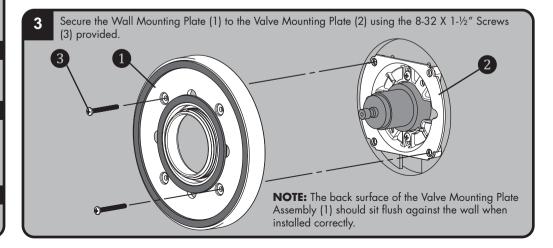





used for installation.


• If the measurement falls between 1-1/4" to 1-5/8", then Spline Adapter marked "A" is to be used for installation.

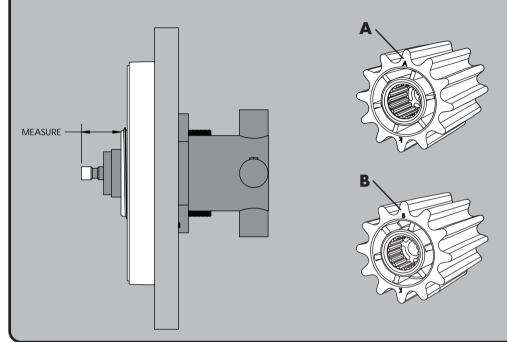



Confirm that the Valve is in the off position. Retrieve Spline Adapter to be used as determined in Step 4. Insert Spline Adapter (1) over Kohler spindle (2). One set of splines on the adapter must be oriented perfectly vertical when installed, as shown below. Secure the Spline Adapter with the 8-32 X 7/8" Screw (3) provided.

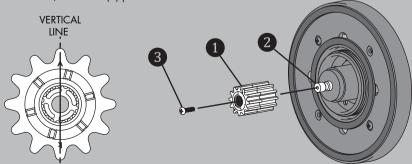


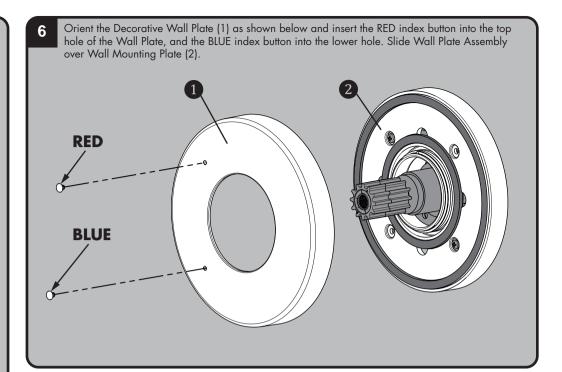

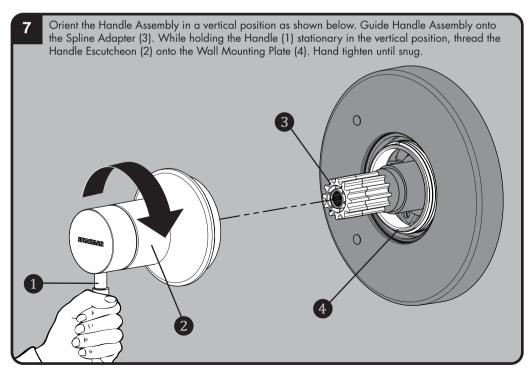


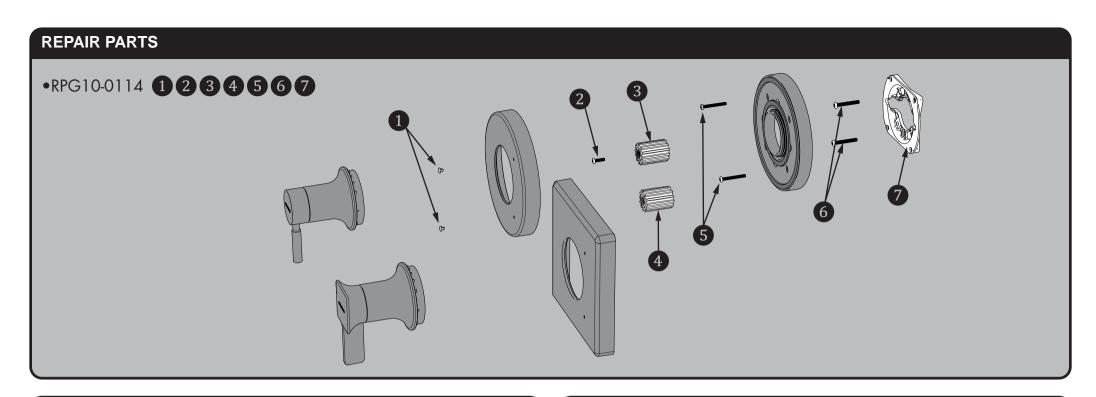


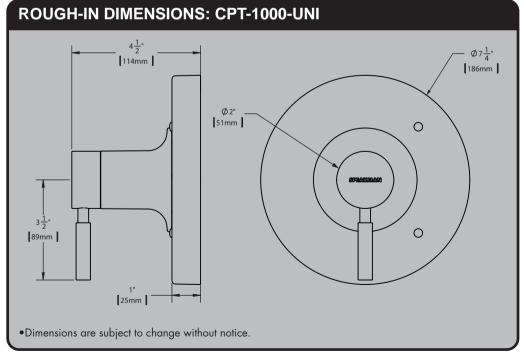

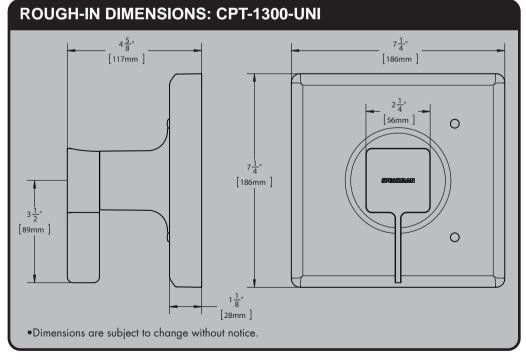

# **CPT-1000-UNI CPT-1300-UNI** Moen Installation

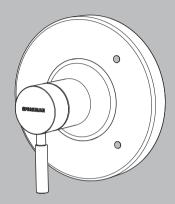

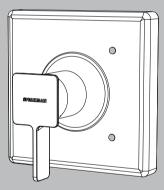

#### **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



800-537-2107 يُرْبَعُ



customerservice@speakman.com



www.speakman.com

92-CPT-1000-UNI-M-R2

## **TOOLS AND SUPPLIES**

**Phillips** Screwdriver



## **IMPORTANT**



- Verify that existing Valve is installed correctly per manufacturers instructions. If valve is not installed correctly, installation of the Universal Valve Trim may not be possible.
- Circular Trim Package shown for reference. While the appearance of your trim may be different, the installation steps are the same.
- This Trim Package is intended to mount only to the following Moen valves. Please verify the model of your valve prior to installation.

# MOEN® Posi-Temp®

2510 2520

2570

2580

2590

\*NOT FOR USE WITH DIVERTER/VOLUME CONTROL MODELS



#### **SAFETY TIPS**

Cover your drain to prevent loss of parts. Be sure to always wear proper eye protection.

#### MAINTENANCE

0


Your new Valve Trim is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.


#### WARRANTY

Additional warranty information can be found at: www.speakman.com


Assemble Moen Adapter (1) to the Valve Mounting Plate (2) taking care to orient it as shown below. Press spring tabs of the Moen Adapter (1) thru the corresponding holes in the Valve Mounting Plate (2).


Clean front surface of wall. Install Valve Mounting Plate Assembly (1) to existing Moen Valve (2), using the 8-32 x 2-1/2" Screws (3) provided. Take care to not over tighten mounting screws, or deformation of the Valve Mounting Plate (1) may occur. The back surface of the Valve Mounting Plate Assembly (1) should sit flush against the wall when installed correctly. Verify that Moen® Stop Tube and Temperature Limit Stop are present and properly installed

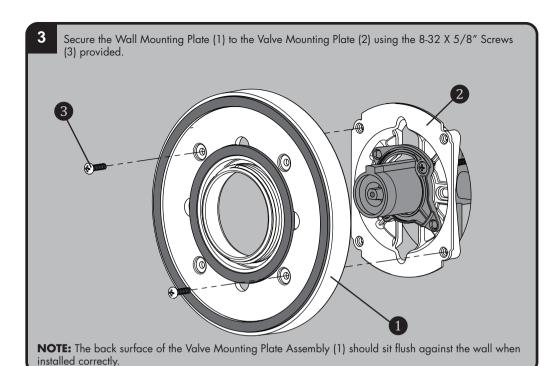


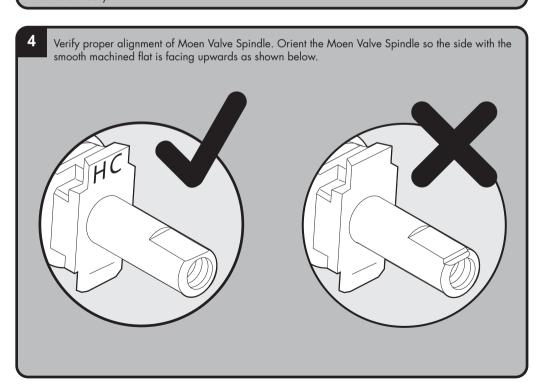



- The Universal Valve Trim kit includes two Spindle Adapters that allow for both shallow and deep mount installations. Observe the distance between the front lip of the Wall Mounting Plate and the end of the Moen Spindle Hub as shown below to determine which Spindle Adapter to use.
  - If the Moen Spindle Sleeve extends beyond the Wall Mounting Plate (1), Use Adapter "A"
  - If the Moen Spindle Sleeve is recessed into the Wall Mounting Plate (1), Use Adapter "B."

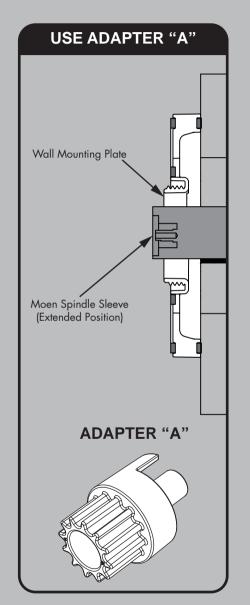


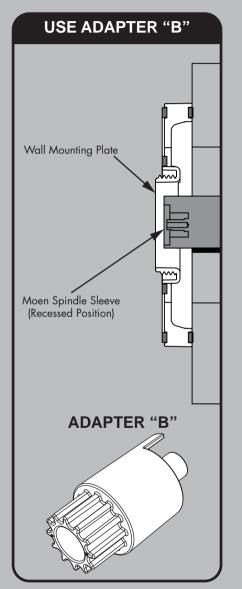


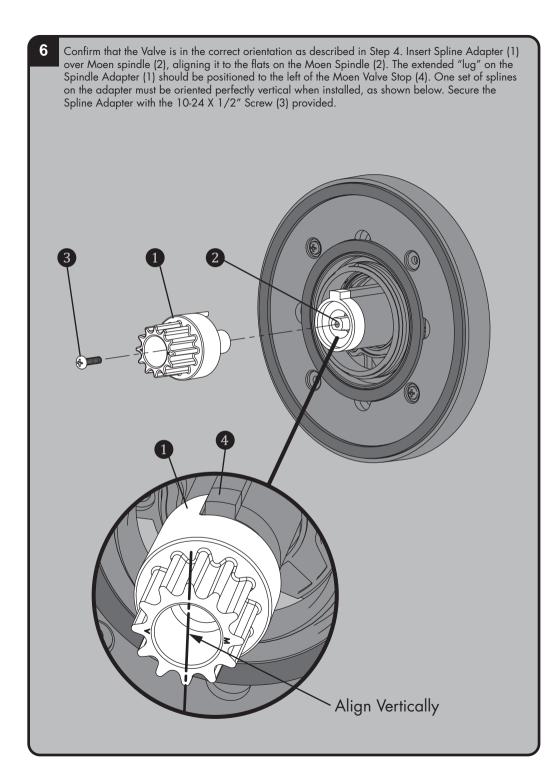


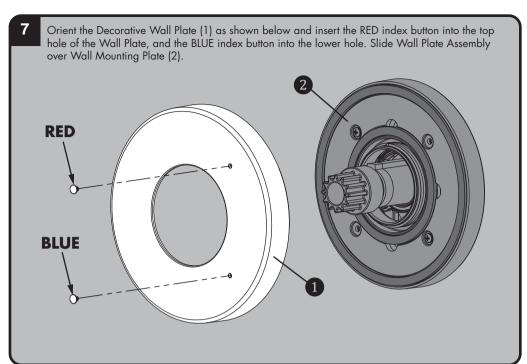

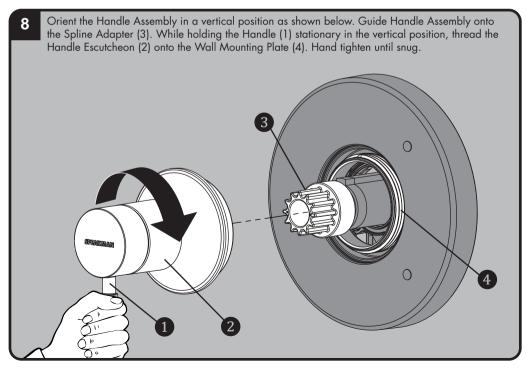


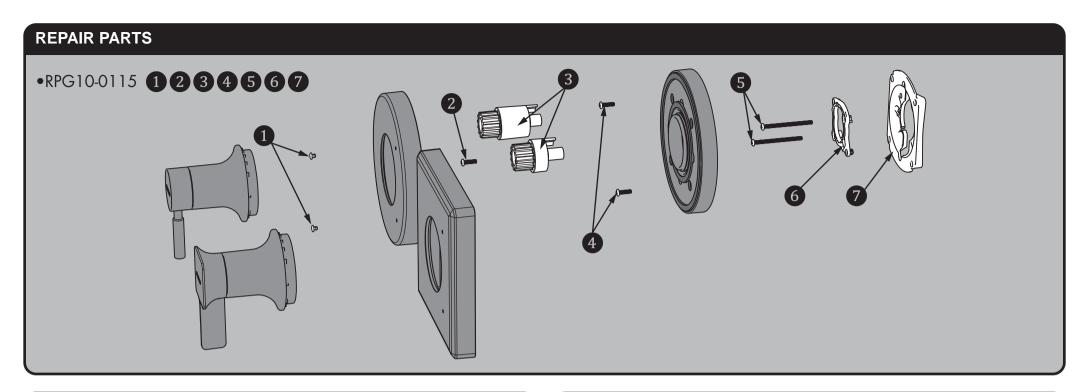


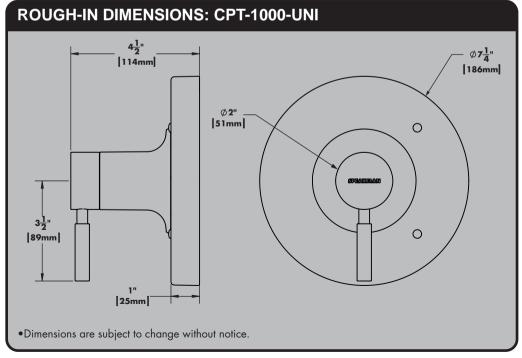

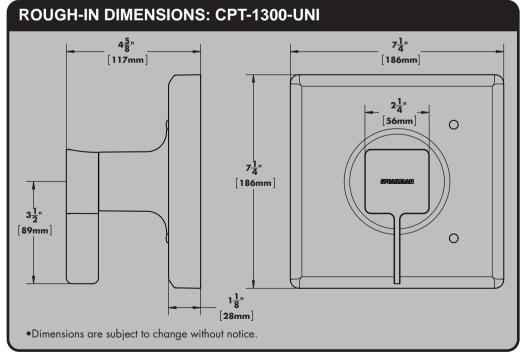

# CPT-1000-UNI CPT-1300-UNI Symmons Installation

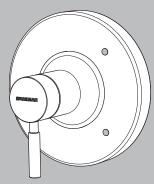

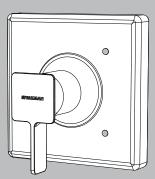



#### **NEED HELP?**

For additional assistance or service please contact:

  **SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720








92-CPT-1000-UNI-S-R2

#### **TOOLS AND SUPPLIES**

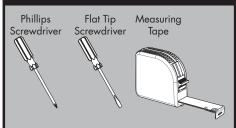

# $\triangle$

 
#### **IMPORTANT**



- Verify that existing Valve is installed correctly per manufacturers instructions. If valve is not installed correctly, installation of the Universal Valve Trim may not be possible.
- Circular Trim Package shown for reference. While the appearance of your trim may be different, the installation steps are the same.
- This Trim Package is intended to only mount to the following Symmons valves. Please verify the model of your valve prior to installation.

## **SYMMONS**® Temptrol®

4000-BODY 4000-X-BODY 46-2-X-BODY



\*NOT FOR USE WITH DIVERTER/VOLUME CONTROL MODELS

#### SAFETY TIPS

 $-\mathbb{Q}$ 

Cover your drain to prevent loss of parts. Be sure to always wear proper eye protection.

#### **MAINTENANCE**




Your new Valve Trim is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

#### WARRANTY

**Q** 


Additional warranty information can be found at: www.speakman.com

Clean front surface of wall. Verify that Symmons Valve Stops (4) are in the "Open" position by turning counter-clockwise. Install Valve Mounting Plate (1) to existing Symmons Valve, using the 8-32 x 1-3/8" screws (2), and Washers (3) provided. Take care to not over tighten mounting screws or damage may occur.

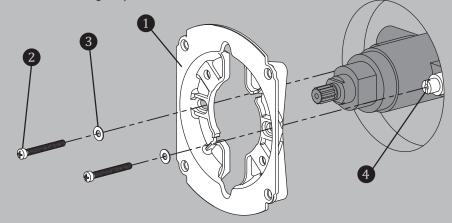



**NOTE:** The back surface of the Valve Mounting Plate Assembly (1) should sit flush against the wall when installed correctly.


Secure the Wall Mounting Plate (1) to the Valve Mounting Plate (2) using the 8-32 X 5/8" Screws (3) provided.

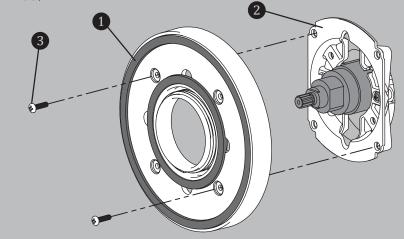



**NOTE:** The back surface of the Valve Mounting Plate Assembly (1) should sit flush against the wall when installed correctly.

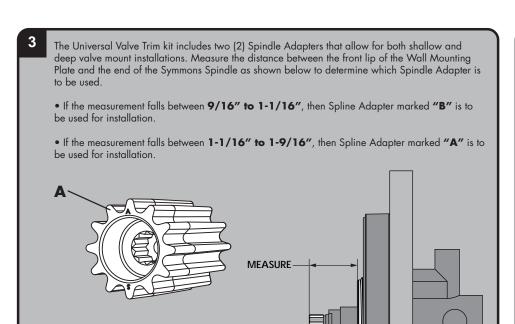


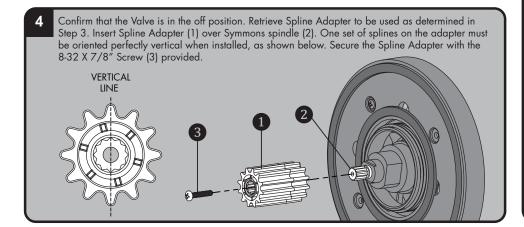


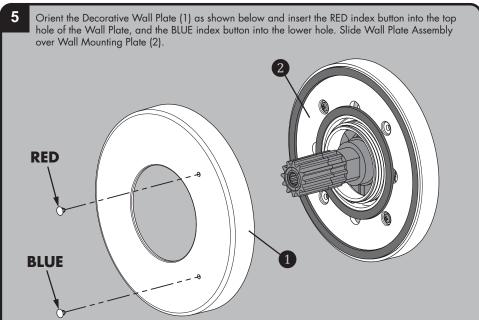

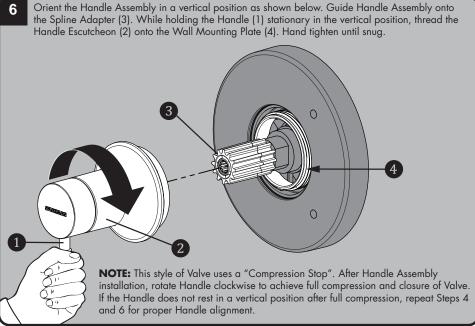


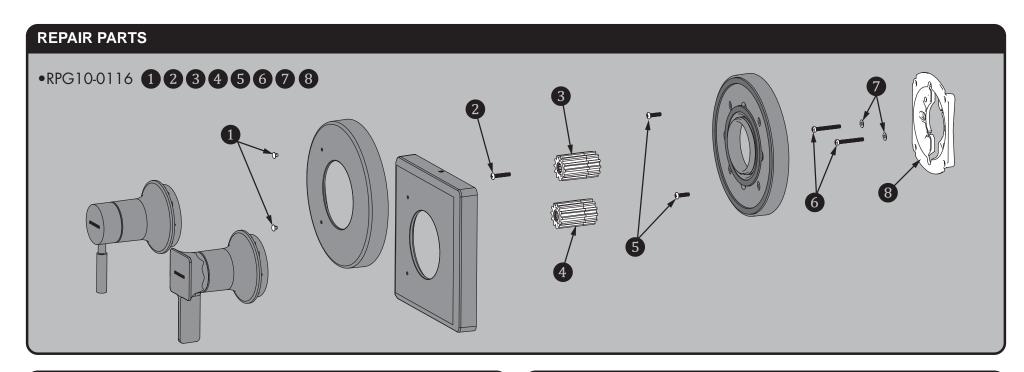

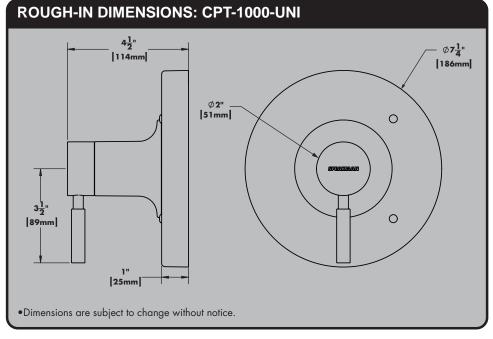

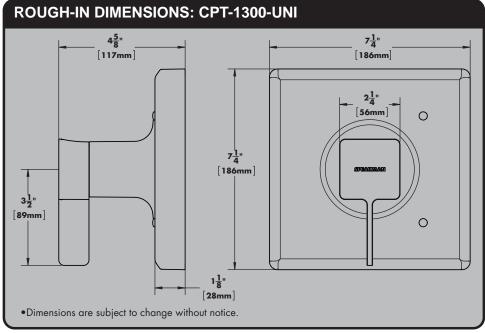

S-2560

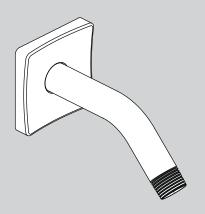

#### **NEED HELP?**


For additional assistance or service please contact:

# **SPEAKMAN®** Company 400 Anchor Mill Road

400 Anchor Mill Road New Castle, DE 19720



customerservice@speakman.com

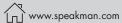

92-S-2560-R3

#### **TOOLS AND SUPPLIES**

Thread Seal Tape Allen Wrench (Included)





# $\triangle$

## **IMPORTANT**



Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.

#### SAFETY TIPS

0

Cover your drain to prevent loss of parts.

#### MAINTENANCE


0

Your new Shower Arm is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.


#### WARRANTY

0


Additional warranty information can be found at: www.speakman.com

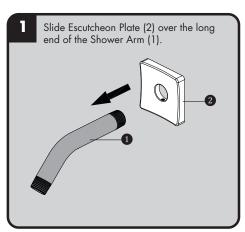

Apply Teflon Tape to inlet side of Shower
Arm (1). Thread Shower Arm (1) into Female
Pipe Fitting within the wall. Firmly tighten,
and make sure Shower Arm (1) Outlet is
pointing in a downward position.

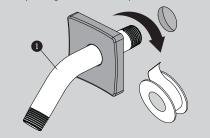


Position Escutcheon Plate (2) flat against wall.
Secure Escutcheon Plate (2) to Shower Arm
(1) by tightening set screw with allen wrench
(Hex: 2.0mm) provided.

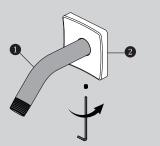

# **ROUGH IN DIMENSIONS** 2.50" [63.50mm] 5.62" [142.76mm] 3.20" [81.22mm] M4X0.7-6q Specifications:

Supply Inlet: 1/2" NPT MALE
Outlet: 1/2" NPT MALE

S-5001-E2 S-5001-E175 S-5001-F15

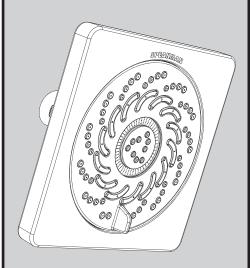

#### **NEED HELP?**

For additional assistance or service please contact:

#### **SPEAKMAN®**



800-537-2107 يُرْبُعُ



customerservice@speakman.com



www.speakman.com

92-S-5001-01

# TOOLS AND SUPPLIES

Thread Seal Tape (included)



Adjustable Wrench



# $\triangle$

# **IMPORTANT**



Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. This showerhead has an operating range of 20-80 psi.

#### SAFETY TIPS



Cover your drain to prevent loss of parts.

#### **MAINTENANCE**



Periodic cleaning using a mild soap and warm water will help keep your Showerhead's appearance in its original condition.

For best results, dry immediately with a soft, clean cloth. <u>DO NOT USE</u> harsh and/or abrasive cleaners.

To help restore the finish, occasionally apply a non-abrasive wax to your showerhead body (follow manufacturers' instructions).

On CHROME PLATED SHOWER HEADS, a two (2) part white vinegar, one (1) part water solution can be used to break down excessive mineral deposits on the sprays. Let the showerhead soak in the solution for about ½ hour then rinse thoroughly. Brush off any remaining mineral deposits if necessary.

 $\underline{\text{DO NOT USE}}$  the vinegar/water treatment on any finish other than Chrome.

To reduce mineral build-up, turn the handle to RAIN position to let the water drain out after every use.


#### WARRANTY



Warranty information can be found at: www.speakman.com





Thread Shower head onto shower arm by turning it in a clockwise direction. Tighten with adjustable wrench. Turn water supply on and check for leaks.

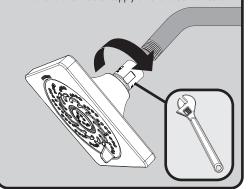



# **ROUGH IN DIMENSIONS**

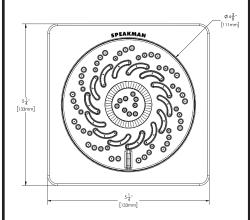

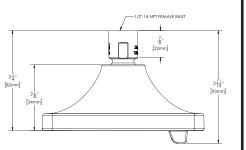

Model: S-5001-E2

Max. Flow Rate: 2.0 gpm (7.6 L/min)

Min. Flow Rate: 1.75 gpm (6.6 L/min) @ 45 psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED

AT 6.6 L/MIN (1.75 GPM) OR LESS.

Model: S-5001-E175

Max. Flow Rate: 1.75 gpm (6.6 L/min)

Min. Flow Rate: 1.50 gpm (5.7 L/min) @ 45 psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED

AT 5.7 L/MIN (1.50 GPM) OR LESS.

Model: S-5001-F15


Max. Flow Rate: 1.5 gpm (5.7 L/min)

Min. Flow Rate: 1.3 gpm (4.9 L/min) @ 45psi FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED

AT 4.9 L/MIN (1.3 GPM) OR LESS.

#### Specifications:

Inlet: 1/2" NPT FEMALE

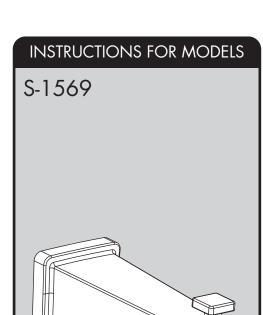

# **NEED HELP?**

For additional assistance or service please contact:

**SPEAKMAN®** Company 400 Anchor Mill Road New Castle, DE 19720



£ 800-537-2107



customerservice@speakman.com



www.speakman.com

92-S-1569-01

# TOOLS AND SUPPLIES



#### **HELPFUL TOOLS & SUPPLIES:**





## **IMPORTANT**



- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.

#### SAFETY TIPS

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

#### **MAINTENANCE**





Your new Speakman product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

#### WARRANTY


0

Additional warranty information can be found at: www.speakman.com

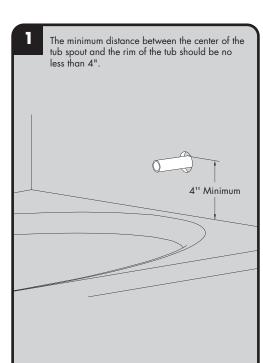

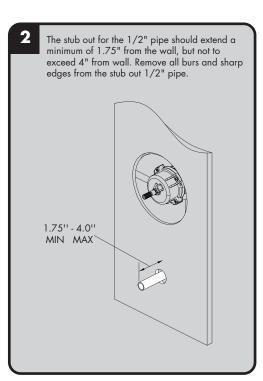

Slide Spout (1) over exposed stub out pipe until flush to wall. Center the Spout (1) on the wall and tighten Set Screw (2) from underneath with a Phillips Screwdriver.

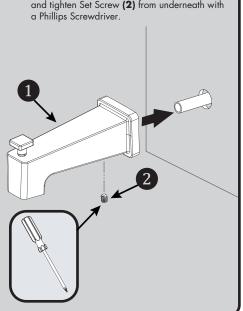

# **ROUGH-IN DIAGRAM**

