

INSTALLATION INSTRUCTIONS

B-1100
Oval Undermount Sink
with Round Bottom


B-1101
Oval Undermount Sink
with Flat Bottom

B-1200
Rectangular Undermount Sink

TOOLS & SUPPLIES NEEDED




If Mounting to Solid Surface Counter

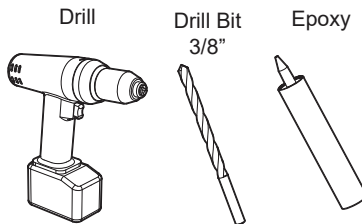

VERIFY CABINET CLEARANCE

1 Verify proper clearance between the sink, faucet, cabinet and drain plumbing.

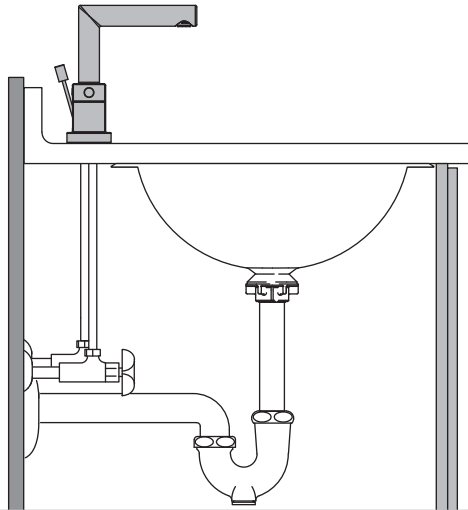

IMPORTANT

SAFETY TIPS:

Be sure to read and understand all instructions before beginning installation.

Inspect all connections after installation.

This installation manual covers several models. While your models may look different, it will install in the same manner.

IMPORTANT:

Provide your countertop manufacturer with your bathroom sink model number. Countertop manufacturer should preinstall the anchors into the underside of the countertop.

Use the anchors and fasteners provided by the countertop manufacturer and the clamps provided with your sink. **DO NOT** only use adhesives or adhesive sealants to install this sink.

Observe all local plumbing and building codes.

Be sure to wear proper eye protection.

Do NOT over tighten any connections or damage may occur.

FINISH MAINTENANCE:

Your new product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

NEED HELP?

For additional assistance or service please contact:



800-537-2107



www.speakman.com

SELECT CUT OUT TEMPLATE


2 For Cutout Templates please refer to your specific model.

B-1100 / B-1101
96-B-1100-AW-01

B-1200
96-B-1200-AW-01

CLEAN MOUNTING SURFACE

3 Clean the underside of the countertop and the rim of the sink.

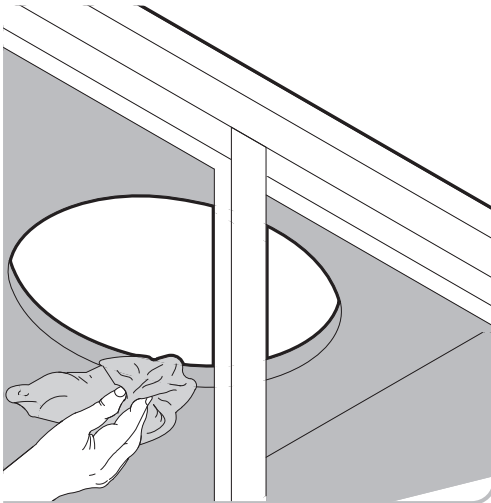

PREINSTALL MOUNTING CLIPS

4 **Solid Surface Countertop Installation:**



For intended use with **Solid Surface** countertops with a minimum thickness of 1" (25mm).

Installer must supply anchors for thinner countertops.

Drill anchor holes 3/8" Dia. x 1/2" deep. Apply small amount of Epoxy (not provided) to closed end of Threaded Knurl (A). Insert Threaded Knurl (threaded open end exposed). **Allow Epoxy to fully cure.** Once the Epoxy has cured, loosely install the provided Mounting Clip (B), Washer (C), Wing Nut (D) and Screw (E) as shown.

Wood Countertop Installation:


Use an appropriate length Wood Screw (not supplied) to loosely secure the Mounting Clip (B) and Washer (C) in place. Predrilling is recommended.

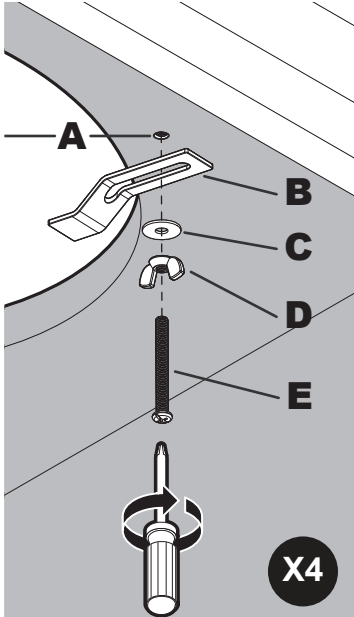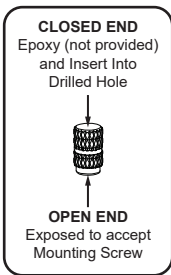

X4


APPLY SEALANT

5 Generously apply 100% silicone sealant around the rim of the Sink.

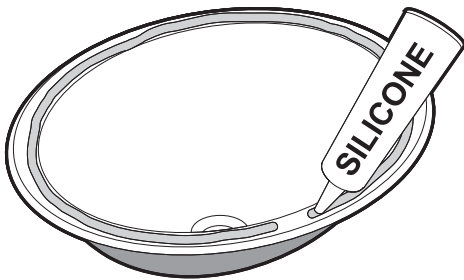


SECURE MOUNTING CLIPS

6 Position the sink under the opening. Hold the sink in place and rotate each clip over the rim. Evenly tighten the clips to secure.

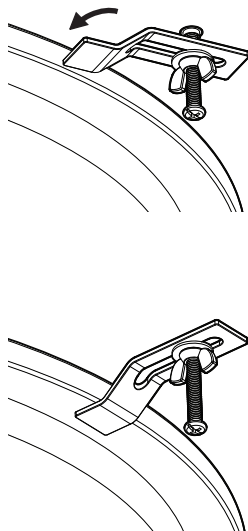


CLEAN EXCESS SILICONE

7 Immediately wipe away any excess Sealant. Allow Sealant to fully cure before proceeding to the next step.

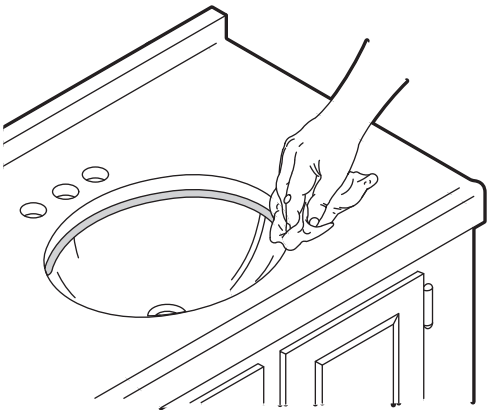


INSTALL FAUCET AND DRAIN

8 Complete the faucet and drain installations.

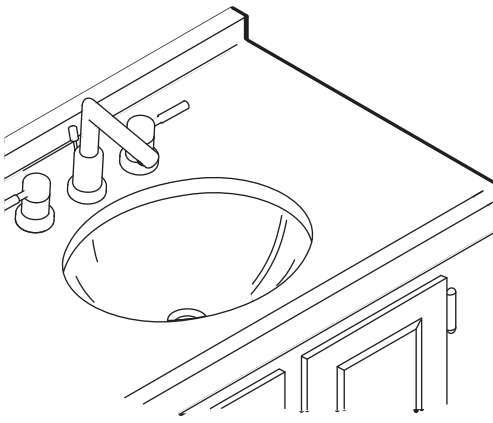


INSPECT FOR LEAKS

9 Run water into the sink and check all connections for leaks.

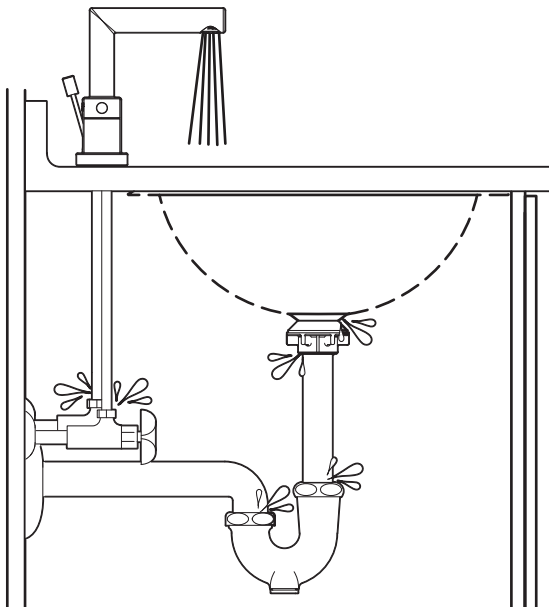


B-1100 ROUGH IN DIAGRAM

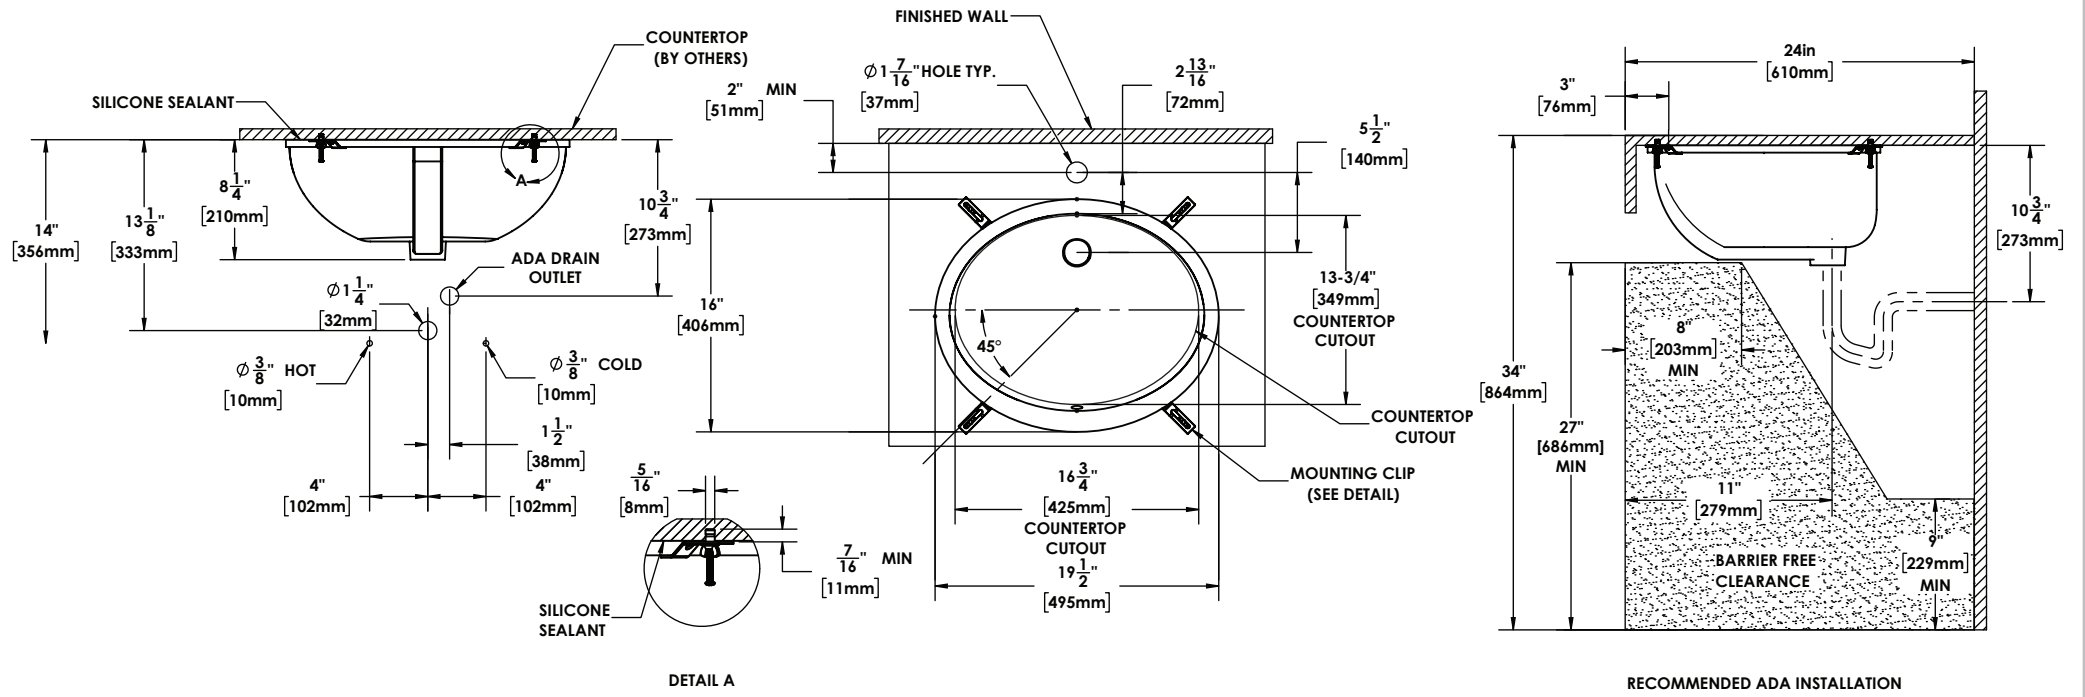


DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.

B-1101 ROUGH IN DIAGRAM

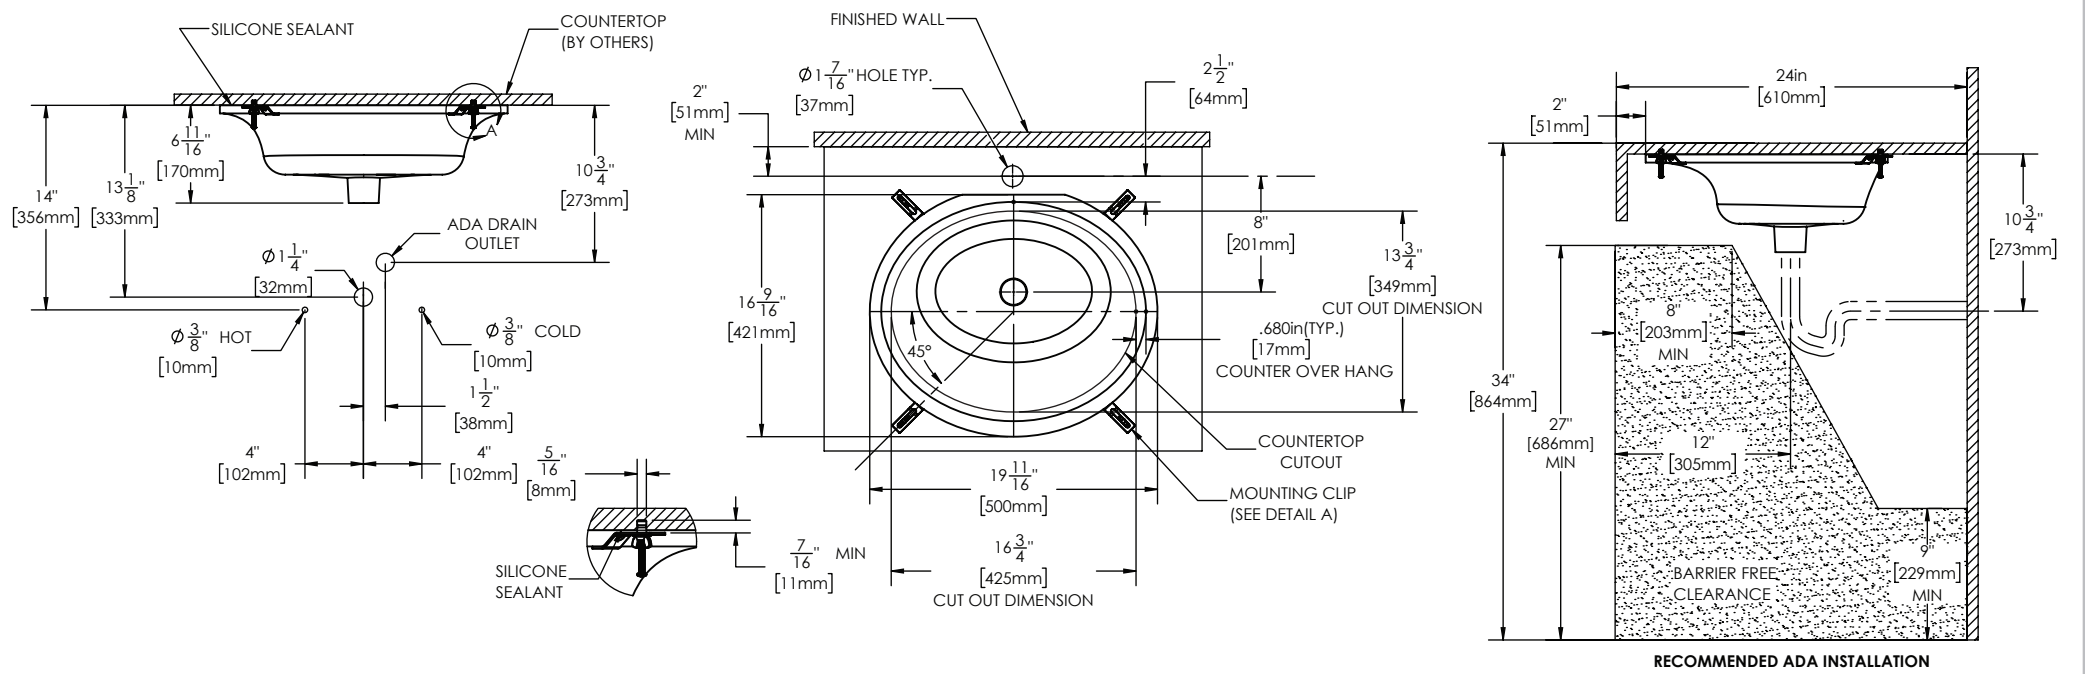

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.

B-1200 ROUGH IN DIAGRAM

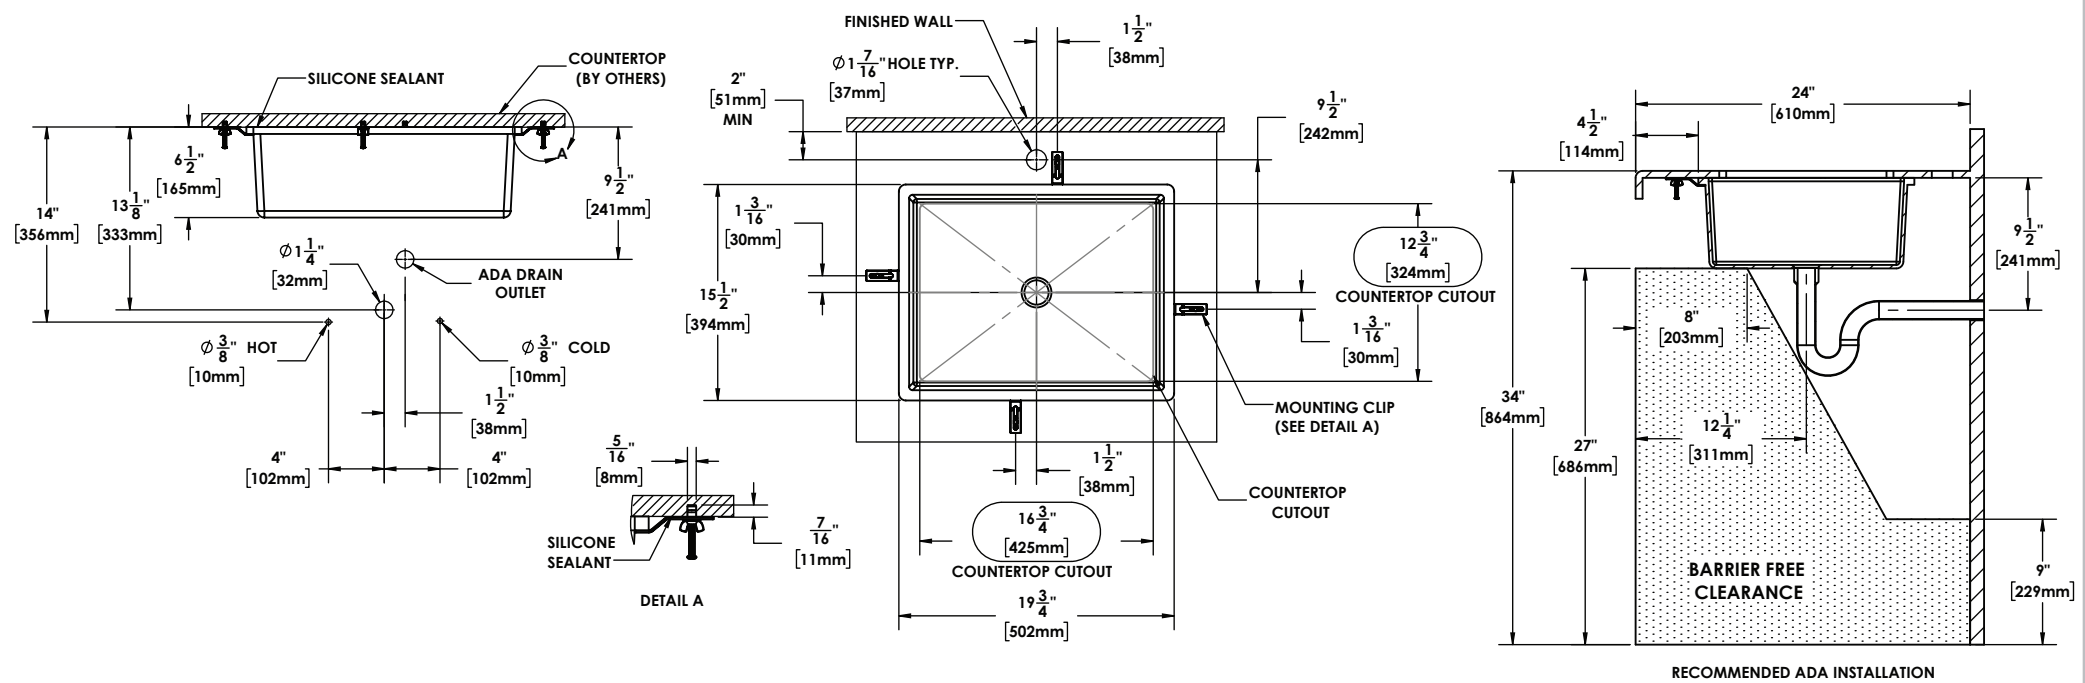

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.