



## INSTALLATION INSTRUCTIONS

### Accessories

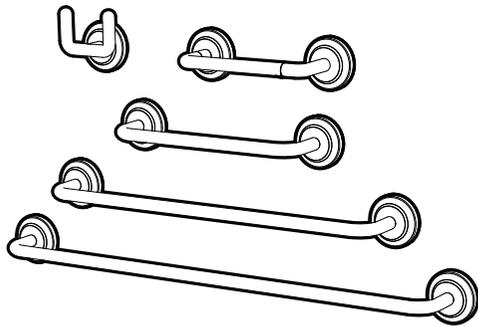


## TOOLS AND SUPPLIES

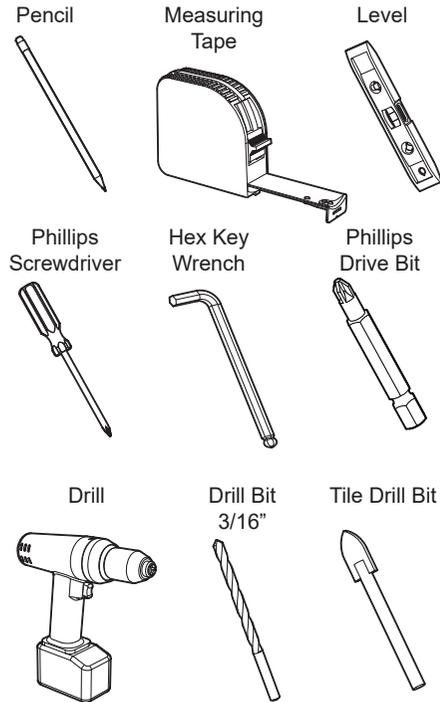


## REMOVE MOUNTING BLOCKS

- 1 Remove the Mounting Block(s) by loosening (but not removing) the pre-installed set screw at bottom with the included Hex Key

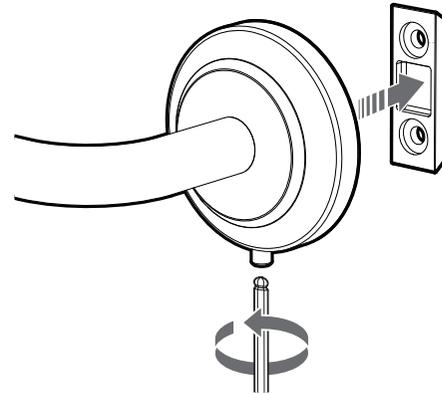


## MARK MOUNTING LOCATIONS

- 2 At the selected height, mark center point of mounting locations onto wall referencing the rough in diagram.

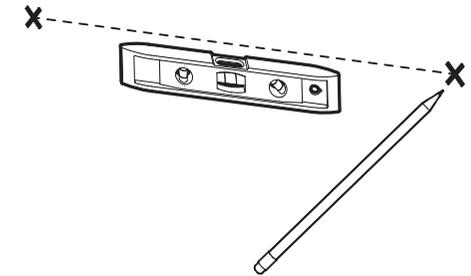


## MARK DRILL LOCATIONS

- 3 Align Mounting Block over center point marked in previous step. Mounting Block should be vertical as shown below. Mark Mounting Screw locations onto the wall surface. Remove items after marking mounting locations.

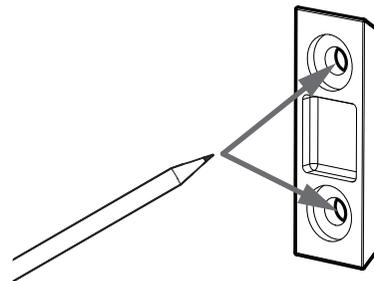

## DRILL MOUNTING LOCATIONS

- 4 If mounting directly to wood stud, Plastic Anchors are not required. If mounting to drywall, drill guide holes at marked locations using a Drill equipped with a  $\text{\O} 3/16''$  bit. If mounting to tile, use a drill bit that is specified for tile.

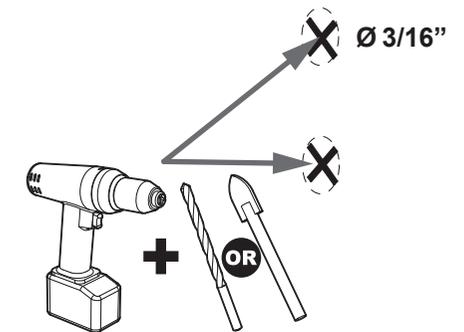

## IMPORTANT

Be sure to read and understand all instructions before beginning installation.

Cover the drain to avoid loss of parts.

Be sure to wear proper eye protection.

Do NOT over tighten any connections or damage may occur.


If mounting to a tile surface, ensure you acquire appropriate mounting hardware capable of supporting the accessory in use. Follow the instructions included with the manufacturer's mounting hardware.

## MAINTENANCE

Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.


## INSTALL MOUNTING ANCHORS

- 5** Insert Plastic Anchors into drilled holes and screw in the anchor using a Philips Head screwdriver, or a Drill equipped with a Phillips Driver Bit until the head is flush with the wall surface.

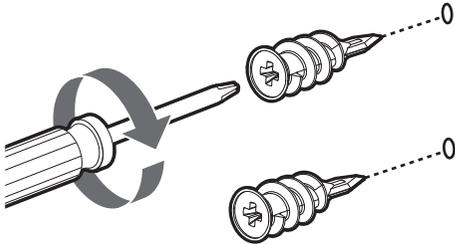


## INSTALL MOUNTING BLOCKS

- 6** Secure Mounting Block with the Mounting Screws provided. Verify that the Mounting Block is aligned vertically.

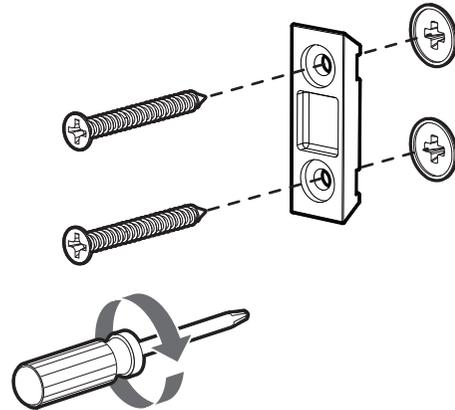


## INSTALL ACCESSORY

- 7** Place Accessory over Mounting Block and secure the pre-installed set screw with the included Hex Key.






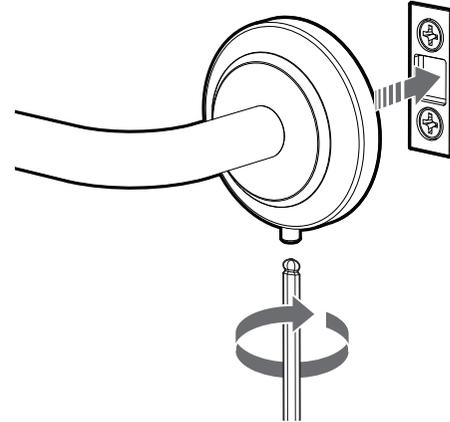


## REPAIR PARTS

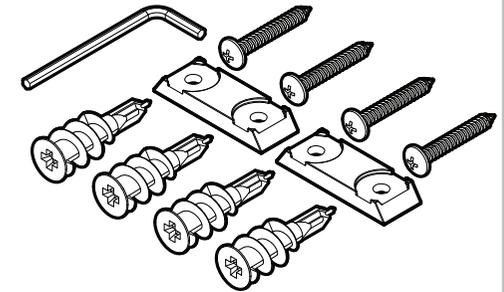

**RPG05-104020**  
MOUNTING HARDWARE

## ROUGH IN DIAGRAM

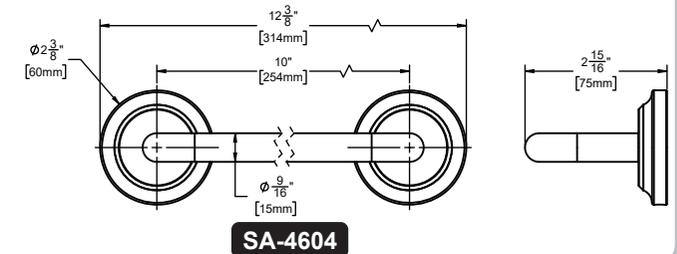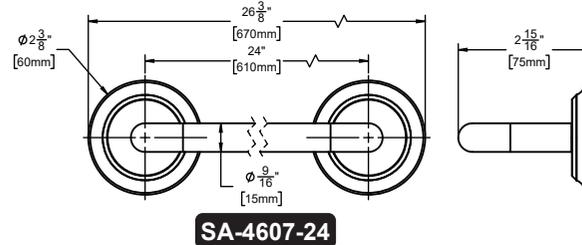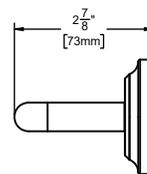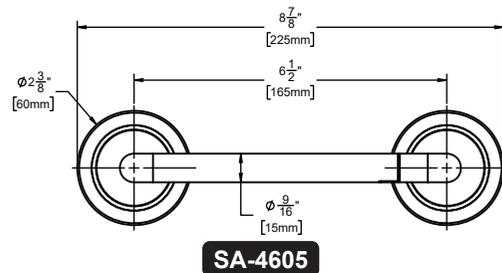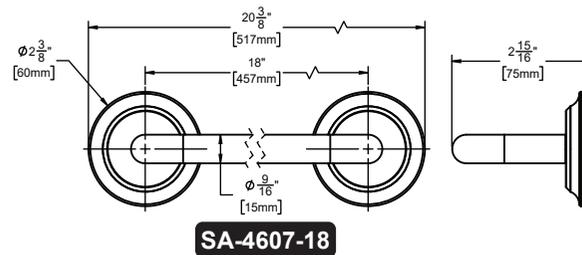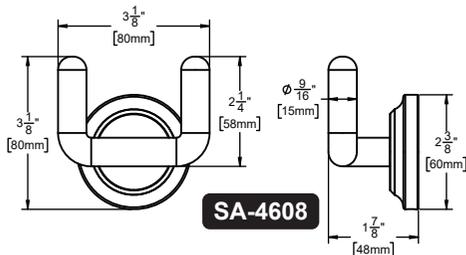

### NEED HELP?

For additional assistance or service please contact:



800-537-2107



www.speakman.com