

# SPEAKMAN®

VS-2054

## Installation, Operation & Maintenance Instructions

ADA / HANDICAP SHOWER AND BAR

### DESCRIPTION

Speakman ADA handicap shower system includes hand held shower (VS-100-PC), 69" stainless steel hose (G63-0060), vacuum breaker (VS-117), and a 30" slide bar (VS-123). Connects up to standard shower arm (Not Included). Handheld shower flows 2.5 gpm (9.46 L/min) to meet ANSI A112.18.1/ CSA B125.1 Standard. ADA Compliant.

### SPECIFICATIONS

SUPPLY: ½" NPSM FEMALE (VS-117)

SHIPPING WEIGHT: 3.3 LBS.

FLOW RATE: 2.5 gpm (9.46 L/min), MAX.,  
HAND HELD, VARIABLE

### INSTALLATION

Remove (turn counterclockwise) your existing shower head from the shower arm. Clean the shower arm threads of any debris and wrap teflon tape in the clockwise direction around shower arm threads. Assemble vacuum breaker to shower arm. Hand tighten. Ensure washer is inside connection to prevent leaks. Assemble one end of the hose to the vacuum breaker. Hand tighten firmly. Assemble the hand held shower to the other end of the hose and hand tighten firmly. When installing the bar, the location is optional but restricted by the hose length. Attach bar to wall using fasteners supplied. Slip the hand held shower into the slide bar holder. Adjust height of the holder by loosening the holder lever handle. Tighten handle to lock into place.


### OPERATION

To operate the hand held shower, push the pause button to one side to bring the flow down to a trickle, then simply push it to the other side to turn the flow back on full force.

### MAINTENANCE

The finish of your SPEAKMAN VERSATILE® hand held shower and all of the other components can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results. The flow control device limits water flow to 2.5 gallons per minute and is located in the base of the hand held. The small orifice in the flow regulator may become clogged, resulting in lower flow and a weaker performance. To clean the flow regulator, simply remove the hose from the hand shower and clean as necessary.

NOTE: DRAWINGS NOT TO SCALE

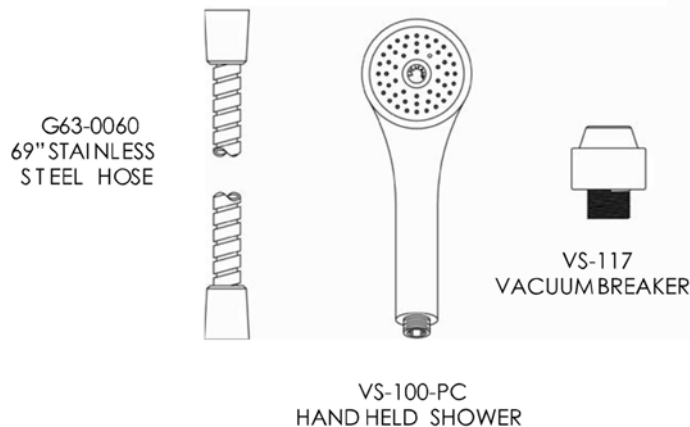

**SPEAKMAN®**


## ROUGH-IN

G63-0060  
69" STAINLESS  
STEEL HOSE




ARM NOT  
INCLUDED

VS-117  
VACUUM  
BREAKER

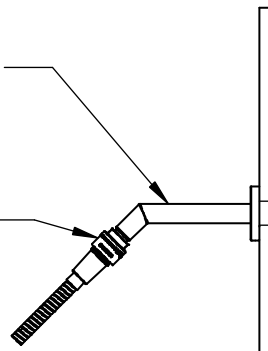

NOTE: MOUNTING LOCATION  
OF THE BAR IS OPTIONAL BUT  
LIMITED BY THE HOSE LENGTH

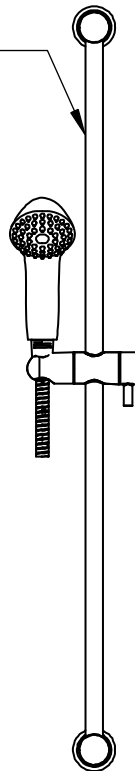


VS-100-PC  
HANDHELD



30in  
[762mm]

VS-123  
SLIDE BAR

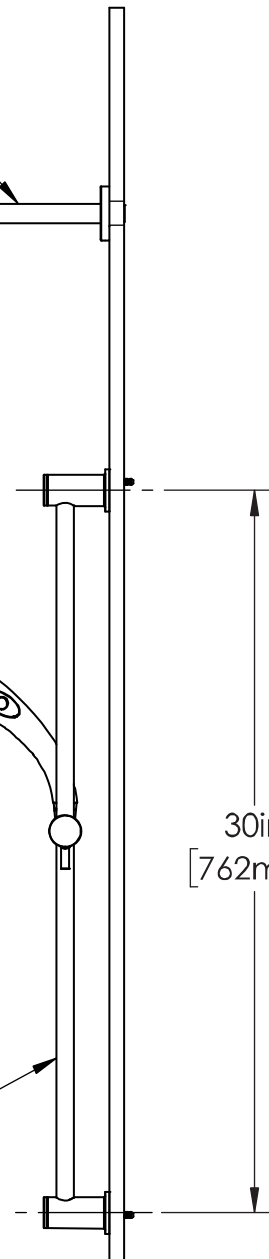

### NOTES:

1. ALL DIMENSIONS ARE IN INCHES (MILLIMETERS UNLESS SPECIFIED) AND ARE SUBJECT TO CHANGE WITHOUT NOTICE.
2. VACUUM BREAKER INLET IS 1/2-14 NPSM FEMALE.
3. THE LOCATION OF THE SLIDE BAR IS OPTIONAL, BUT RESTRICTED BY THE 69" HOSE LENGTH RUNNING FROM THE SHOWER ARM CONNECTION TO HAND SHOWER.

**SPEAKMAN®**