


## INSTRUCTIONS FOR MODELS


CPT-1183

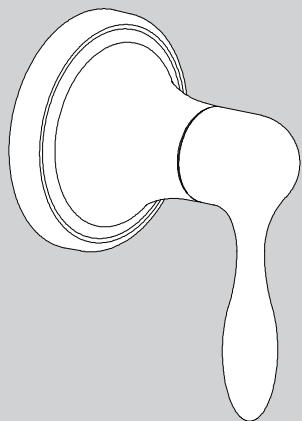

### NEED HELP?

For additional assistance or service please contact:

**SPEAKMAN®** Company  
400 Anchor Mill Road  
New Castle, DE 19720

 800-537-2107

 customerservice@speakman.com

 www.speakman.com

92-CPT-1183-02

## TOOLS AND SUPPLIES



### IMPORTANT



- Do not over tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.

### SAFETY TIPS



Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

### MAINTENANCE



Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.


### WARRANTY



Warranty information can be found at:  
[www.speakman.com](http://www.speakman.com)


1

Clean wall surface. Place Mounting Base (1), on to valve, align mounting holes, and secure with Mounting Screws (2).

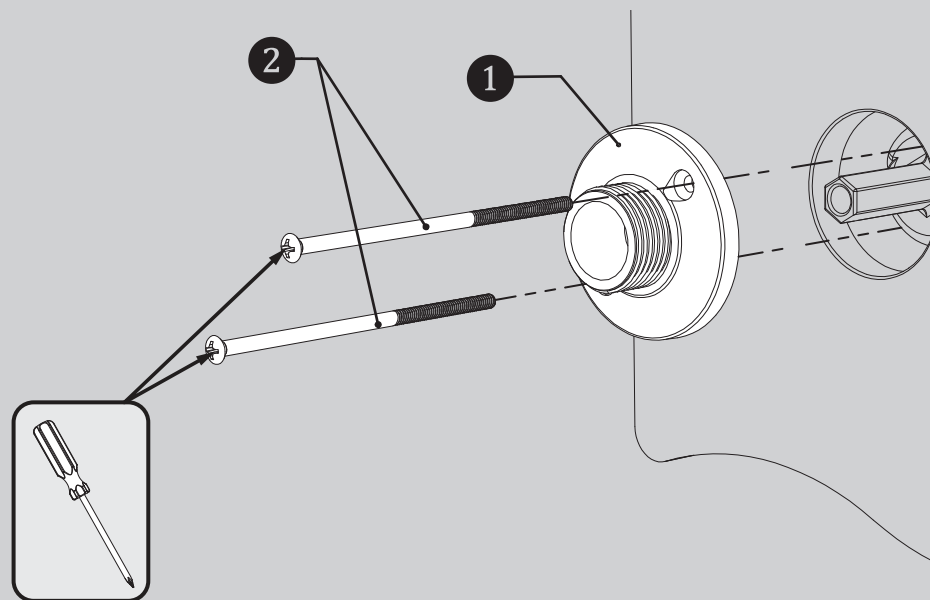

2

Align the HEX Spindle (1) with the HEX drive (2) of the Handle Assembly. Keep Handle in a stationary vertical position as you thread Handle Hub (3) on to Mounting Base. Tighten until snug.

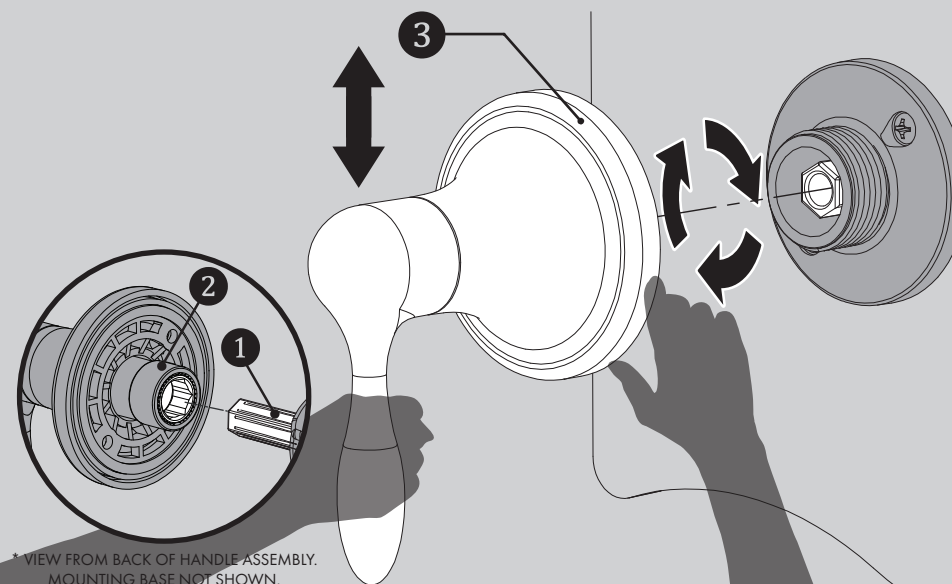


\* VIEW FROM BACK OF HANDLE ASSEMBLY.  
MOUNTING BASE NOT SHOWN.

NOTES:

COMPLIANCE:

ASME A112.18.1/CSA B125.1  
ADA Compliant ♿

Contractor to supply necessary inlet connections.

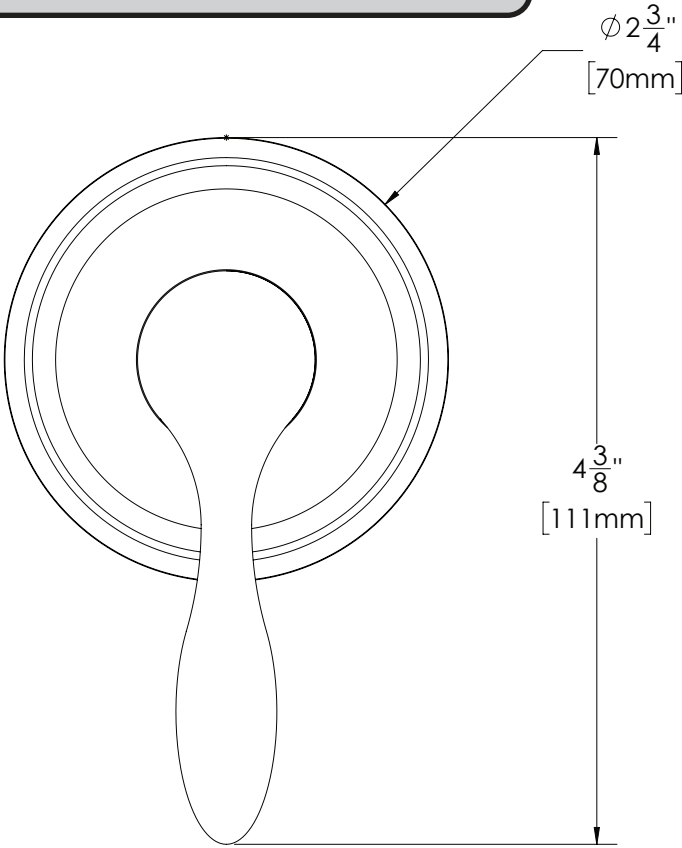

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.

