


# SPEAKMAN SE-4360



## CART ASSEMBLY INSTALLATION INSTRUCTIONS

Note- Holds up to 500 lbs.

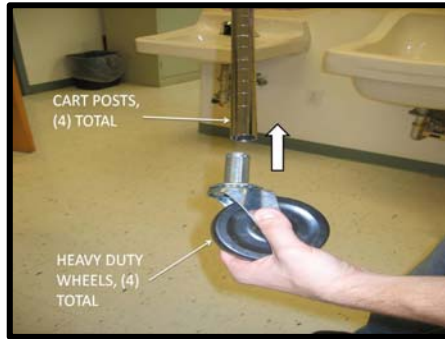



**STEP 1** – INSERT THE WHEELS INTO THE BOTTOM OF ALL FOUR (4) POSTS.

**STEP 2** – FASTEN A PAIR OF SLIP SLEEVES AROUND THE GROOVE AT THE BOTTOM OF EACH OF THE FOUR (4) POSTS.

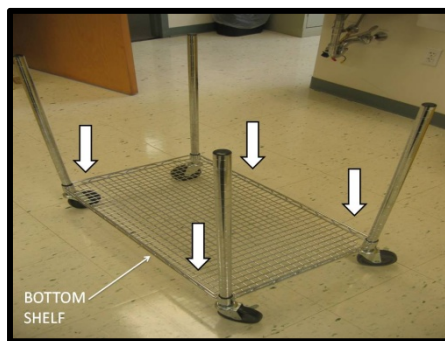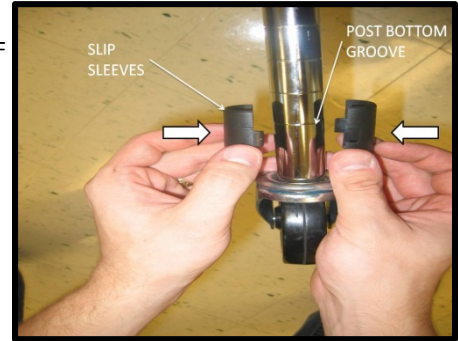



**STEP 3** – SLIDE THE BOTTOM SHELF OVER THE TOP OF ALL FOUR (4) POSTS UNTIL IT RESTS. MAKE SURE THE TWO (2) LOCKABLE WHEELS ARE ON THE SAME SIDE OF THE SHELF. **TIP: IF NECESSARY, USE A RUBBER MALLETT TO FURTHER SECURE THE SHELF.**

**STEP 4** - DETERMINE THE HEIGHT AND SIDE TO PLACE THE HANDLE BAR. FASTEN A PAIR OF SLIP SLEEVES AROUND THE GROOVE CHOSEN FOR THE HANDLE ON TWO (2) OF THE FOUR (4) POSTS.

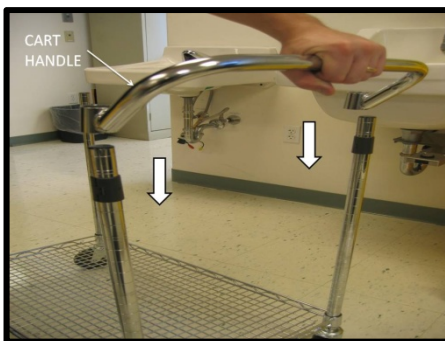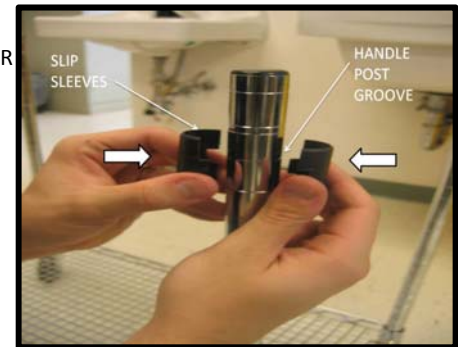


**STEP 5** – SLIDE THE HANDLE BAR OVER THE TWO (2) POSTS UNTIL IT RESTS SNUGLY ON THE SLIP SLEEVES. **TIP: IF NECESSARY, USE A RUBBER MALLETT TO FURTHER SECURE THE HANDLE.**

**STEP 6** – FASTEN SLIP SLEEVES ALONG THE TOP GROOVE OF EACH OF THE FOUR (4) POSTS.

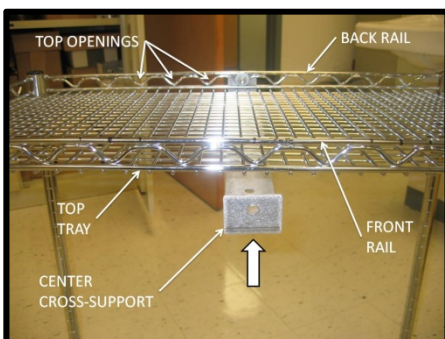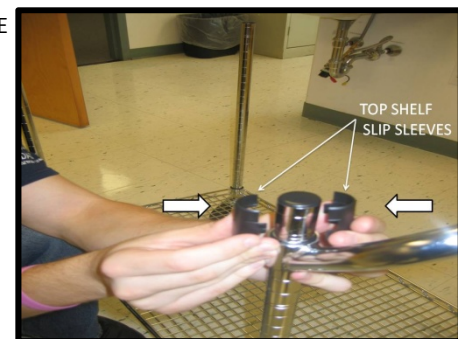

**STEP 7** – USING TWO (2) 3/8" X 1" LONG BOLTS, FOUR (4) FLAT WASHERS, TWO (2) LOCK WASHERS, AND TWO (2) NUTS, ATTACH THE CENTER CROSS SUPPORT TO THE TOP SHELF. **TIP: USE THE SIXTH TOP OPENING IN THE FRONT/BACK RAILS OF THE TOP SHELF.**


**STEP 8** – SLIDE THE TOP SHELF OVER THE TOP OF THE FOUR (4) POSTS UNTIL IT RESTS SNUGLY ON THE SLIP SLEEVES. **TIP: IF NECESSARY, USE A RUBBER MALLETT TO FURTHER SECURE THE HANDLE.**

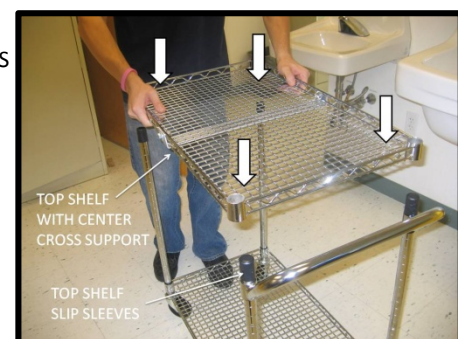

**THE CART ASSEMBLY IS NOW COMPLETE. FOR MOUNTING THE EYEWASH**



UNIT, SEE BACK SIDE OF THIS SHEET.

## **SPEAKMAN SE-4360** **EYEWASH MOUNTING INSTALLATION INSTRUCTIONS**

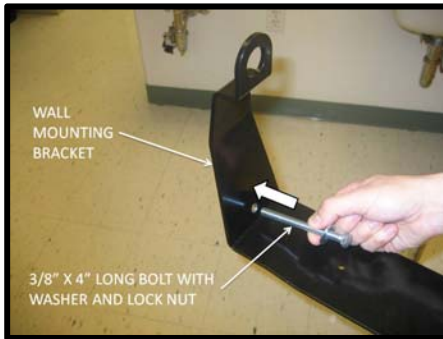


**STEP 9** – PLACE A LOCK WASHER AND WASHER AROUND THE 3/8" X 4" LONG BOLT AND SLIDE IT THROUGH THE HOLE AT THE BOTTOM OF THE EYEWASH WALL MOUNTING BRACKET.

**STEP 10** – ATTACH THE WALL MOUNT BRACKET TO THE EYEWASH UNIT BY FIRST LATCHING THE UPPER HANDLE PORTION OF THE TANK TO THE UPPER HOOK OF THE WALL BRACKET. POSITION THE BOTTOM PORTION OF THE TANK ONTO THE WALL BRACKET SO THE DRAIN FITTING CAN BE INSERTED THROUGH THE DRAIN HOLE OF THE TANK AND THE HOLE IN THE WALL BRACKET SIMULTANEOUSLY.

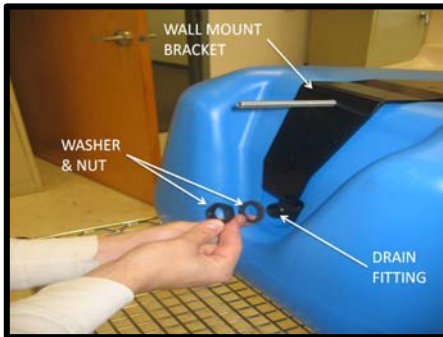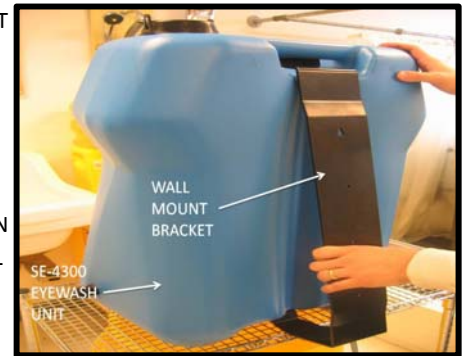

**STEP 11** – LOCK THE DRAIN FITTING INTO PLACE BY ASSEMBLING WASHER AND NUT TO UNDERSIDE OF DRAIN FITTING.

**STEP 12** – SLIDE BOLT SPACER AND WASHER OVER BOLT. SLIP BOLT THROUGH HOLE IN CENTER CROSS SUPPORT.

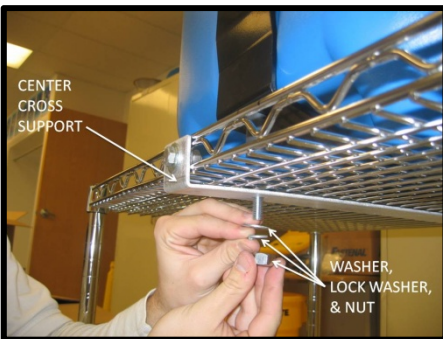


**STEP 13** – USING A FLAT WASHER, LOCK WASHER, AND NUT, SECURE THE SE-4300 EYEWASH UNIT TO THE CENTER CROSS SUPPORT AND TOP SHELF OF THE SAFETY CART.

**STEP 14** – PLACE THE FLUID COLLECTION STATION ON THE BOTTOM SHELF OF THE CART TO COLLECT WATER DISPENSED FROM THE DRAIN FITTING ONCE THE UNIT HAS BEEN ACTIVATED. **TIP: FOR TANK FILLING, OPERATION, VISUAL INSPECTION, AND MAINTENANCE INSTRUCTIONS, SEE SE-4300 INSTALLATION INSTRUCTION SHEET.**



**STEP 15** - USE THE PETCOCK DRAIN ON THE SIDE OF THE COLLECTION STATION TO DRAIN WATER AFTER EACH USE.

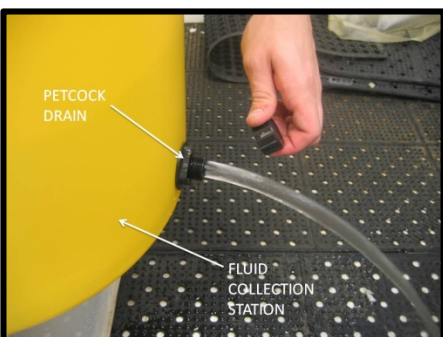

**PART NO. 92-3173-R2**  
**3/2014**

**SPEAKMAN®**

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747  
Visit us on the web at [www.speakmancompany.com](http://www.speakmancompany.com)